

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours:		AD administration						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Alta	ENAT	0700-1430					-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays					-	-
Arendal/Gullknapp	ENGK	0700-1400 EXC holidays					-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays					-	-
		MIL: H24 via Base/Wing Ops						
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
		16 SEP - 14 MAY: 0700-1445 EXC holidays						
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
		16 SEP - 14 MAY: 0700-1445 EXC holidays						
Bodø	ENBO	0700 - 1430 EXC holidays					-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays					-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays					-	-
Florø	ENFL	NIL						
Førde/Bringeland	ENBL	NIL						
Hammerfest	ENHF	0700 - 1400 EXC holidays					-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-
		16 SEP - 14 MAY: 0700-1445 EXC holidays						
Hasvik	ENHK	0700 - 1400 EXC holidays					-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays					-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays					-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays					-	-
Kirkenes/Høybuktnoen	ENKR	0700 - 1430 EXC holidays					-	-
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays					-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays					-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays					-	-
Leknes	ENLK	0700 - 1400 EXC holidays					-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
Mo I Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Molde/Årø	ENML	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-
		16 SEP - 14 MAY: 0700-1445 EXC holidays						
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays					-	-
Namsos	ENNM	0700 - 1430 EXC holidays					-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays					-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays					-	-
Oslo/Gardermoen	ENGM	0700 - 1500					-	-
Rygge	ENRY	H24						
Røros	ENRO	0700 - 1400 EXC holidays					-	-
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	0800 - 1400 EXC holidays					-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays					-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays					-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays					-	-
Sogndal/Haukåsen	ENSG	NIL						
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays					-	-
		15 SEP - 14 MAY: 0700 - 1445 EXC holidays						
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays					-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays					-	-
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays					-	-
Sørkjosen	ENSR	NIL						
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays					-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays					-	-
Vadsø	ENVD	0700 - 1500 EXC holidays					-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays					-	-
Ørland	ENOL	CIV: 0700 - 1400					-	-
Ørsta-Volda/Hovden	ENOV	0700 - 1400 EXC holidays					-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays					-	-

AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værøy	ENVR	0630 - 1100 / 1330 - 1700					0630 - 1100	1330 - 1700

18.07.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

AD 2.3 Operational hours: Customs and immigration

AD 3.3 Operational hours: Customs and immigration

AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værøv	ENVR				NIL			

18.07.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: MET Office

AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Alta	ENAT	NIL						
Andøya/Andenes	ENAN	H24						
Arendal/Gullknapp	ENGK	AVBL O/R ATS						
Bardufoss	ENDU	0530-2200					N/A	0930-2230
		Bardufoss MET (+47) 67 03 44 85						
Bergen/Flesland	ENBR	NIL						
Berlevåg	ENBV	NIL						
Bodø	ENBO	H24						
		Bodø MET (+47) 75 53 72 80						
Brønnøysund/Brønnøy	ENBN	NIL						
Båtsfjord	ENBS	NIL						
Florø	ENFL	NIL						
Førde/Bringeland	ENBL	NIL						
Hammerfest	ENHF	NIL						
Harstad/Narvik/Evenes	ENEV	NIL						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	NIL						
Honningsvåg/Valan	ENHV	NIL						
Hønefoss/Eggemoen	ENEG	NIL						
Kirkenes/Høybuktmoen	ENKR	NIL						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	NIL						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	NIL						
Leknes	ENLK	NIL						
Mehamn	ENMH	NIL						
Mo i Rana/Røssvoll	ENRA	NIL						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Molde/Årø	ENML	NIL						
Mosjøen/Kjærstad	ENMS	NIL						
Namsos	ENNM	NIL						
Notodden/Tuven	ENNO	NIL						
Ny Ålesund/ Hamnerabben	ENAS	NIL						
Oslo/Gardermoen	ENGM	NIL						
Rygge	ENRY	NIL						
Røros	ENRO	NIL						
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	NIL						
Sandane/Anda	ENSD	NIL						
Sandefjord/Torp	ENTO	NIL						
Sandnessjøen/Stokka	ENST	NIL						
Sogndal/Haukåsen	ENSG	NIL						
Stavanger/Sola	ENZV	NIL						
Stokmarknes/Skagen	ENSK	NIL						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Stord/Sørstokken	ENSO	NIL						
Svalbard/Longyear	ENSB	0730 - 1400 EXC holiday					N/A	N/A
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	NIL						
Sørkjosen	ENSR	NIL						
Tromsø/Langnes	ENTC	NIL						
Trondheim/Værnes	ENVA	NIL						
Vadsø	ENVD	NIL						
Vardø/Svartnes	ENSS	NIL						
Ørland	ENOL	H24						
Ørsta-Volda/Hovden	ENOV	NIL						
Ålesund/Vigra	ENAL	NIL						

AD 3.3 Operational hours: MET Office

AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værøy	ENVR			O/R MWO Tromsø TEL (+47) 77 62 13 00				

18.07.2019

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours

AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Alta	ENAT	0500 - 2320					0500 - 1400	0600 - 2320
		RMK: -						
Andøya/Andenes	ENAN	0415 - 2130					0745 - 1545	1000 - 1300 / 1700 - 2200
		RMK: Public HOL excluded						
Arendal/Gullknapp	ENGK	No detailed HR of OPS						
		RMK: REF NOTAM ENGK						
Bardufoss	ENBR	0530-2200				0530-1440	0850 - 2230	
		RMK: -						
Bergen/Flesland	ENBU	AVBL H24						
		RMK: -						
Berlevåg	ENBV	0500-2115					CLSD	1845 - 2115
		RMK: HOSP/SAR utenom åpningstid O/R 40 MIN prior notice via ENBD ATCC / ENKR ATC						
Bødø	ENBO	AVBL H24						
		RMK: -						
Brønnøysund/Brønnøy	ENBN	0500 - 2200					0930 - 1540	1130 - 1940
		RMK: -						
Båtsfjord	ENBS	0630 - 1245				CLSD	1430 - 2205	
		RMK: HOSP/SAR utenom åpningstid O/R 40 MIN prior notice via ENBD ATCC						
Flora	ENFL	0435 - 2030			0550 - 2030		0755-0835 / 1150-1710	1755 - 0835 / 1225 - 2030
		RMK: -						
Førde/Bringeland	ENBL	0510-2210					0705 - 1445	1100 - 2200
		RMK: -						
Hammerfest	ENHF	H24			0000 - 1430		1020 - 2400	
		RMK: -						
Harstad/Narvik/Evenes	ENEV	0510-2400					0530-1240 / 1820-1940	0820-2240
		RMK: -						
Hasvik	ENHK	0630-2115					CLSD	1330-1530 / 1730-2115
		RMK: HOSP/SAR utenom åpningstid O/R via ENBD ATCC						
Haugesund/Karmøy	ENHO	0510-2200					0600-2130	1000-2300
		RMK: -						
Honningsvåg/Valan	ENHV	0435-2215					CLSD	1700-2215
		RMK: -						
Hønefoss/Eggemoen	ENEG	No ATS service provided						
		RMK: -						
Kirkenes/Høybuktmoen	ENKR	0330-2300					0700-1500	0900-2350
		RMK: -						
Kristiansund	ENKU	Not ATS service provided						
		RMK: AD AVBL 0800 - 2200. PPR for all TFC						
Kristiansand/Kjevik	ENCN	0510 - 2215					0610 - 2110	0510 - 2215
		RMK: -						
Kristiansund/Kvernberget	ENKB	0515 - 2200					0600 - 1530	1230 - 2200
		RMK: -						
Lakselv/Banåk	ENNA	0500 - 2230					0500 - 1410	1100 - 2230
		RMK: AVBL O/R H24 for charter/flights						
Leknes	ENLK	0415 - 2140					0935 - 1240	0935 - 2140
		RMK: -						
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
		RMK: -						
Mo i Rana/Røssvoll	ENRA	0450 - 2210					0535 - 1355	0910 - 2150
		RMK: -						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Molde/Åre	ENML	0520 - 2230			0530 - 2230		0600 - 1830	1000 - 2230
		RMK: -						
Mosjøen/Kjellerstad	ENMS	0520 - 2050					0720 - 1550	0920 - 2050
		RMK: -						
Namsos	ENNM	0500 - 2100					0500 - 1100	1500 - 2100
		RMK: -						
Notodden/Tuven	ENNO	0600-1800					1030-1600	1330-1800
		RMK: -						
Ny Ålesund/ Hamnerabben	ENAS	No detailed HR of OPS, AFIS AVBL in accordance with PPR						
		RMK: Contact Kings Bay Ltd. or Longyear AFIS, REF ENSB						
Oslo/Gardermoen	ENGM	H24						
		RMK: -						
Rygge	ENRY	0700 - 1900		0700 - 2300		0700 - 1900	0800 - 1500	-
		RMK: -						
Røros	ENRO	0530 - 1420 / 1730 - 1820				0530 - 1420 / 1730 - 1820	-	1300 - 1820
		RMK: -						
Rørvik/Ryum	ENRM	0515 - 2130					0700 - 1035	1320 - 2110
		RMK: -						
Røst	ENRS	0615 - 0915 / 1710 - 1810		0615 - 1910		0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315
		RMK: -						
Sandane/Anda	ENSD	0510 - 2050					0820 - 1410	1220 - 2050
		RMK: -						
Sandefjord/Torp	ENTO	0500 - 2200						
		RMK: -						
Sandnessjøen/Stokka	ENST	0350 - 2130					0530 - 1300	1120 - 2200
		RMK: -						
Sogndal/Haukefjell	ENSG	0500 - 2015					0805 - 1145	1030 - 2020
		RMK: -						
Stavanger/Sola	ENZV	AVBL H24						
		RMK: -						
Stokmarknes/Skagen	ENSK	0420-2135					1000 - 1500	1150 - 2135
		RMK: -						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	CLSD	1100 - 1815
		RMK: Utvidet åpningstid O/R TLF (+47) 926 65 553						
Svalbard/Longyear	ENSB	H24						
		RMK: -						
Svea	ENSA	AFIS AVBL O/R or PPR						
		RMK: -						
Svolvær/Helle	ENSH	0330 - 2135					0730 - 1450	0930 - 1330 / 1545 - 2135
		RMK: -						
Sørkjosen	ENSR	0525 - 1945					CLSD	1545 - 1945
		RMK: -						
Troms/Langnes	ENTC	H24						
		RMK: -						
Trondheim/Værnes	ENVA	H24						
		RMK: -						
Vadsø	ENVD	0330-2400					1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
		RMK: -						
Varde/Svartnes	ENSS	0730-2130					CLSD	1700 - 2130
		RMK: -						
Ørland	ENOL	TWR H24					APP CLSD	
		APP 0800-1430						
		RMK: Outside detailed APP HR, APP service provided by TWR						
Ørsta-Volda/Hovden	ENOV	0510-2225				0510-1915	0710-1415	1130-2225
		RMK: -						
Ålesund/Vigra	ENAL	0500-2230						
		RMK: -						

AD 3.3 Operational hours:

AIROPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værøy	ENVR	FIS AVBL H24 via Bodø ATCC						

18.07.2019

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 3.3 Operational hours:		Fuel						
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værv	ENVR	NIL						

18.07.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: Handling

AD 3.3 Operational hours								
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Værøy	ENVR	No detailed OPS HR, AVBL O/R						
RMK: AD ADMIN								

18.07.2019

Data with a yellow background is updated since last revision.

Security

AD 3.3 Operational hours: Security								
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Vardv	FNVR				O/R ADMIN			

18.07.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges

Data with a yellow background is updated since last revision

AD 2.3 Operational hours: De-icing

AD 3.3 Operational hours: De-icing								
AIRPORT	ICAO	MON	TUE	WED	THURS	FRI	SAT	SUN
Vaerdy	ENVR				NIL			

Revised per AIRAC

18.07.2019

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	Thurs	Fri	Sat	Sun	
Alta	ENAT	CAT 4 CAT 7	Outside published HR CAT 7 0600 - 2200						0600-1200	0900-2200
Andøya/Andenes	ENAN	CAT 6 CAT 7	H24 O/R ATC MNM 12 HR før ETA							
Arendal/Gullknapp	ENGK	CAT 7	NIL							
Bardufoss	ENDU	CAT 7 CAT 8/9	H24 O/R ATC MNM 24 HR før ETA							
Bergen/Flesland	ENBR	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN før ETA							
Berlevåg	ENBV	CAT 4	0630 - 2200						0600 - 1330	1030 - 1330
Bodø	ENBO	CAT 7	H24							
Brønnøysund/Brønnøy	ENBN	CAT 4 CAT 5	0530-1940 AVBL til SKED DH8C						0930-1540	1130-1940
Båtsfjord	ENBS	CAT 4	0600-2205						CLSD	1430-2205
Florø	ENFL	CAT 4	0510 - 2030				0615 - 2030		1225 - 1720	0815 - 0835 / 1235 - 2030
Førde/Bringeland	ENBL	CAT 4	0500-2230						0645-1530	1100-2200
Hammerfest	ENHF	CAT 4	H24							
Harstad/Narvik/Evenes	ENEV	CAT 7 CAT 9	0500 - 2200 AVBL O/R ATC						0530 - 1300	0900 - 2230
Hasvik	ENHK	CAT 4	0630-2115						CLSD	1330-1530 / 1930-2115
Haugesund/Karmøy	ENHD	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0510-2200						0600-2130	1000-2300
Honningsvåg/Valan	ENHV	CAT 4	0435-2215						CLSD	1700-2215
Hønefoss/Eggemoen	ENEG	CAT 4	AVBL O/R							
Kirkenes/Høybukta	ENKR	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0600-2200						0800-1530	0800-2200
Kjeller	ENKJ	CAT 6	O/R for MIL operations							
Kristiansand/Kjevik	ENCN	CAT 4 CAT 7 CAT 8	Outside published CAT 7 HR of OPR 0500-2205 Outside published CAT 7 HR of OPR, AVBL O/R ATC MNM 1 HR prior to ETA O/R ATC MNM 1 HR før ETA							0500-2245
Kristiansund/Kvernberget	ENKB	CAT 4 CAT 7	- 0515-2200						0700-0900 0515-0700 / 0900-1530	1230-2200
Lakselv/Banak	ENNA	CAT 4 CAT 7 CAT 9	Outside published CAT 7 HR of OPR 0500 - 2230 Outside published CAT 7 HR of OPR, AVBL O/R ATC prior to ETA O/R ATC MNM 48 HR prior to ETA						1000 - 1645	1030 - 2300
Leknes	ENLK	CAT 4	0415 - 2140						0935 - 1240	0935 - 1230 / 1440 - 2140
Mehamn	ENMH	CAT 4	0350 - 1410 / 1530 - 2230						0450 - 0700 / 1120 - 1400	1520 - 2230
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210						0535 - 1330	0945 - 1040 / 1315 - 2150
Airport	ICAO	Category	Mon	Tue	Wed	Thurs	Fri	Sat	Sun	
Molde/Årø	ENML	CAT 7	0520 - 2230				0530 - 2230		0600 - 1830	1000 - 2230
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2050						0720 - 1550	0920 - 2050
Namsos	ENNM	CAT 4	0500 - 2100						0500 - 1100	1500 - 2100
Notodden/Tuven	ENNO	CAT 3	O/R							
Ny Ålesund/ Hamnerabben	ENAS	CAT 3	O/R within AFIS HR of SER							
Oslo/Gardermoen	ENGM	CAT 9	H24							
Rygge	ENRY	CAT 3	O/R							
Røros	ENRO	CAT 4 CAT 5 CAT 6	AVBL for SCHED TFC and charter TFC. Other TFC AVBL on 10 MIN prior request AVBL O/R ATS MNM 48 HR prior to ETA							
Rørvik/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130						0700 - 1035	1320 - 2110
Røst	ENRS	CAT4	0615 - 0815 / 1710 - 1910	0615 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315	
Sandane/Anda	ENSD	CAT 4	0510 - 2050						0820 - 1400	1220 - 2050
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200							
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130						0530 - 1245	1200 - 2200
Sogndal/Haukåsen	ENGSG	CAT 4	0500 - 2015						0805 - 1145	1030 - 2020
Stavanger/Sola	ENZV	CAT 7 CAT 9	H24 AVBL O/R ATC MNM 30 MIN prior to ETA							
Stokmarknes/Skagen	ENSK	CAT 4	0425 - 2135						1010 - 1500	1155 - 2135
Airport	ICAO	Category	Mon	Tue	Wed	Thurs	Fri	Sat	Sun	
Stord/Sørstokken	ENSO	CAT 4 CAT 5 CAT 6	AVBL for SCHED TFC AVBL O/R ADMIN MNM 48 HR prior to ETA							
Svalbard/Longyear	ENSB	CAT 4	0730-1000 / 1300-1545	0900-1100 / 1300-1545	1230-1545	0615-1130 / 1300-1545	1300-1430	-	-	
		CAT 7	0000-0100 1000-1300 1800-1930** 2200-0000*	0000-0100* 1100-1300 2200-0000**	0000-0100* 0930-1230 1800-1930**	1130-1300 2200-0000*	0000-0100* 0930-1300 2200-0000	0000-0100 0100-0230*** 1600-1730	0530-0630 1130-1330 2200-0000	
		RMK	* Not AVBL JUN 11., 12., 14., 18., 19., 21., 25., 26. & 28. / AUG 13., 14., 16., 20., 21., 23., 27., 28. & 30. ** Only JUN 17., 19., 24. & 26. / JUL 1., 3., 8., 10., 15., 17., 22., 24., 29. & 31. / AUG 5. & 7. *** Only JUN 22., 29. / JUL 6., 13., 20. & 27. / AUG 3. & 10.							
Svea	ENSA	CAT 3	AVBL O/R							
Svolvær/Helle	ENSH	CAT 4	0330 - 2135						0730 - 1450	0930 - 1330 / 1530 - 2135
Sørkjosen	ENSR	CAT 4	0525 - 1945						CLSD	1545 - 1945
Tromsø/Langnes	ENTC	CAT 4 CAT 7 CAT 8	2300 - 0500 0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR) AVBL O/R H24							
Trondheim/Værnes	ENVA	CAT 7	H24							
Vadsø	ENVD	CAT 4	0330 - 2400						1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130						CLSD	1630 - 2130
Ørland	ENOL	CAT 6	H24							
Ørsta-Volda/Hovden	ENOV	CAT 4	0510 - 2225				0510 - 1915		0710 - 1415	1130 - 2225
Ålesund/Vigra	ENAL	CAT 4 CAT 7	AVBL O/R outside CAT 7 HRS of OPR 0500 - 2230							

AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	Thurs	Fri	Sat	Sun
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045 1345 - 1645