

Revised per AIRAC15.08.2019

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours:		AD administration						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0700-1430					-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays					-	-
Arendal/Gullknapp	ENGK	0700-1400 EXC holidays					-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays MIL: H24 via Base/Wing Ops					-	-
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays 16 SEP - 14 MAY: 0700-1445 EXC holidays					-	-
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays 16 SEP - 14 MAY: 0700-1445 EXC holidays					-	-
Bodø	ENBO	0700 - 1430 EXC holidays					-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays					-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays					-	-
Florø	ENFL	NIL						
prior tode/Bringeland	ENBL	NIL						
Hammerfest	ENHF	0700 - 1400 EXC holidays					-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays 16 SEP - 14 MAY: 0700-1445 EXC holidays					-	-
Hasvik	ENHK	0700 - 1400 EXC holidays					-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays					-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays					-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays					-	-
Kirkenes/Høybuktkmoen	ENKR	0700 - 1430 EXC holidays					-	-
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays					-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays					-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays					-	-
Leknes	ENLK	0700 - 1400 EXC holidays					-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
Mo I Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	15 MAY - 15 SEP: 0700 - 1400 EXC holidays 16 SEP - 14 MAY: 0700-1445 EXC holidays					-	-
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays					-	-
Namsos	ENNM	0700 - 1430 EXC holidays					-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays					-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays					-	-
Oslo/Gardermoen	ENGM	0700 - 1500					-	-
Rygge	ENRY	H24						
Røros	ENRO	0700 - 1400 EXC holidays					-	-
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	0800 - 1400 EXC holidays					-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays					-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays					-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays					-	-
Sogndal/Haukåsen	ENSG	0800 - 1400					-	-
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays 15 SEP - 14 MAY: 0700 - 1445 EXC holidays					-	-
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays					-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays					-	-
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays					-	-
Sørkjosen	ENSR	NIL						
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays					-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays					-	-
Vadsø	ENVD	0700 - 1500 EXC holidays					-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays					-	-
Ørland	ENOL	CIV: 0700 - 1400					-	-
Ørsta-Volda/Hovden	ENOV	0700 - 1400 EXC holidays					-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays					-	-

AD 3.3 Operational hours:		AD administration						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	0630 - 1100 / 1330 - 1700					0630 - 1100	1330 - 1700

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: Customs and immigration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				NIL			
Arendal/Gullknapp	ENGK				NIL			
Bardufoss	ENDU				NIL			
Bergen/Flesland	ENBR				H24			
Berlevåg	ENBV				NIL			
Bodø	ENBO				AVBL O/R to ATS 90 MIN prior to ETA			
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
prior tode/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				AVBL O/R to ATS 4 HR prior to ETA			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				AVBL O/R to ATS 1 HR prior to ETA			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				AVBL O/R AD ADMIN			
Kirkenes/Høybuktmoen	ENKR				AVBL O/R to ATS 1 HR prior to ETA			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				AVBL O/R to ATS 1 HR prior to ETA			
Kristiansund/Kvernberget	ENKB				AVBL O/R to ATS 4 HR prior to ETA			
Lakselv/Banak	ENNA				O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48 HR prior to ETA.			
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo i Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML				O/R to ATS 3 HR prior to ETA			
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO				O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.			
Ny Ålesund/ Hamnerabben	ENAS				Not required			
Oslo/Gardermoen	ENGM				H24			
Rygge	ENRY				REF AD 2.20			
Røros	ENRO				AVBL 0700 - 1430 O/R to ATS 3 HR prior to ETA		NIL	NIL
Rørvik/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO				AVBL O/R to ATS 90 MIN prior to ETA			
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				0700 - 1430 2 HR prior notice required		NIL	NIL
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB				All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20			
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC				O/R 90 MIN prior notice via operator / handling agent			
Trondheim/Værnes	ENVA				AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00			
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				NIL			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				AVBL O/R to ATS 2 HR prior to ETA			

AD 3.3 Operational hours: Customs and immigration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				NIL			

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: MET Office

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	NIL						
Andøya/Andenes	ENAN	H24						
Arendal/Gullknapp	ENGK	AVBL O/R to ATS						
Bardufoss	ENDU	0530-2200 Bardufoss MET (+47) 67 03 44 85					0530-1440	0850-2230
Bergen/Flesland	ENBR	NIL						
Berlevåg	ENBV	NIL						
Bodø	ENBO	H24 Bodø MET (+47) 75 53 72 80						
Brønnøysund/Brønnøy	ENBN	NIL						
Båtsfjord	ENBS	NIL						
Florø	ENFL	NIL						
prior tode/Bringeland	ENBL	NIL						
Hammerfest	ENHF	NIL						
Harstad/Narvik/Evenes	ENEV	NIL						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	NIL						
Honningsvåg/Valan	ENHV	NIL						
Hønefoss/Eggemoen	ENEG	NIL						
Kirkenes/Høybuktmoen	ENKR	NIL						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	NIL						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	NIL						
Leknes	ENLK	NIL						
Mehamn	ENMH	NIL						
Mo i Rana/Røssvoll	ENRA	NIL						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	NIL						
Mosjøen/Kjærstad	ENMS	NIL						
Namsos	ENNM	NIL						
Notodden/Tuven	ENNO	NIL						
Ny Ålesund/ Hamnerabben	ENAS	NIL						
Oslo/Gardermoen	ENGM	NIL						
Rygge	ENRY	NIL						
Røros	ENRO	NIL						
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	NIL						
Sandane/Anda	ENSD	NIL						
Sandefjord/Torp	ENTO	NIL						
Sandnessjøen/Stokka	ENST	NIL						
Sogndal/Haukåsen	ENSG	NIL						
Stavanger/Sola	ENZV	NIL						
Stokmarknes/Skagen	ENSK	NIL						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	NIL						
Svalbard/Longyear	ENSB	0730 - 1400 EXC holiday					N/A	N/A
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	NIL						
Sørkjosen	ENSR	NIL						
Tromsø/Langnes	ENTC	NIL						
Trondheim/Værnes	ENVA	NIL						
Vadsø	ENVD	NIL						
Vardø/Svartnes	ENSS	NIL						
Ørland	ENOL	H24						
Ørsta-Volda/Hovden	ENOV	NIL						
Ålesund/Vigra	ENAL	NIL						

AD 3.3 Operational hours: MET Office

[illegible]

10.10.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision

AD 2.3 Operational hours

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0500 - 2320					0500 - 1400	0600 - 2320
Andøya/Andenes	ENAN	0415 - 2130					0745 - 1545	1000 - 1300 / 1700 - 2200
Arendal/Gullknapp	ENGK	0700-1400						
Bardufoss	ENDU	0530-2200					0530-1440	0850 - 2230
Bergen/Flesland	ENBR	AVBL H24						
Berlevåg	ENBV	0500-2115					NIL	1845 - 2115
Bodø	ENBO	AVBL H24						
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540	1130 - 1940
Båtsfjord	ENBS	0600-2205					NIL	1430 - 2205
Florø	ENFL	0435 - 2030				0550 - 2030	0755-0835 / 1150-1710	0755 - 0835 / 1225 - 2030
prior tode/Bringeland	ENBL	0510-2210					0705 - 1445	1100 - 2200
Hammerfest	ENHF	H24					0000 - 1430	1020 - 2400
Harstad/Narvik/Evenes	ENEV	0510-2400					0530-1240 / 1820-1940	0820-2240
Hasvik	ENHK	0630-2115					NIL	1330-1530 / 1930-2115
Haugesund/Karmøy	ENHD	0510-2200					0600-2130	1000-2300
Honningsvåg/Valan	ENHV	0435-2215					NIL	1700-2215
Hønefoss/Eggemoen	ENEG	No ATS service provided						
Kirkenes/Høybuktnmoen	ENKR	0330-2350					0700-1500	0900-2350
Kjeller	ENKJ	Not ATS service provided						
Kristiansand/Kjevik	ENCN	0510 - 2215					0510 - 2110	0510 - 2215
Kristiansund/Kvernberget	ENKB	0515 - 2200					0600 - 1530	1230 - 2200
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410	1100 - 2230
Leknes	ENLK	0415 - 2140					0935 - 1240	0935 - 2140
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
Mo i Rana/Røssvoll	ENRA	0450 - 2210					0535 - 1355	0910 - 2150
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	0520 - 2230				0530 - 2230	0600 - 1830	1000 - 2230
Mosjøen/Kjærstad	ENMS	0520 - 2050					0720 - 1550	0920 - 2050
Namsos	ENNM	0500 - 2100					0500 - 1100	1500 - 2100
Notodden/Tuven	ENNO	0600-1800					1030-1600	1330-1800
Ny Ålesund/ Hamnerabben	ENAS	No detailed HR of OPS, AFIS AVBL in accordance with PPR. RMK: Contact Kings Bay Ltd. or Longyear AFIS, REF ENSB						
Oslo/Gardermoen	ENGM	H24						
Rygge	ENRY	0700 - 1900		0700 - 2300		0700 - 1900	0800 - 1500	-
Røros	ENRO	0530 - 1420 / 1730 - 1820				0530 - 1420 / 1730 - 1850	-	1300 - 1820
Rørvik/Ryum	ENRM	0515 - 2130					0700 - 1035	1320 - 2110
Røst	ENRS	0615 - 0815 / 1710 - 1910		0615 - 1910		0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315
Sandane/Anda	ENSD	0450-2130					0830-1510	1250-2130
Sandefjord/Torp	ENTO	0500 - 2200						
Sandnessjøen/Stokka	ENST	0350 - 2130					0530 - 1300	1120 - 2200
Sogndal/Haukåsen	ENSG	0500 - 2015					0805 - 1145	1030 - 2020
Stavanger/Sola	ENZV	AVBL H24						
Stokmarknes/Skagen	ENSK	0420-2135					1000 - 1500	1150 - 2135
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
Svalbard/Longyear	ENSB	H24						
Svea	ENSA	AFIS AVBL O/R or PPR						
Svolvær/Helle	ENSH	0330 - 2135			0415 - 2135		0730 - 1300	1130 - 1330/ 1530 - 2135
Sørkjosen	ENSR	0500-1945					NIL	1115-1315 / 1645-1945
Tromsø/Langnes	ENTC	H24						
Trondheim/Værnes	ENVA	H24						
Vadsø	ENVD	0330-2400					1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
Vardø/Svartnes	ENSS	0730-2130					NIL	1700 - 2130
Ørland	ENOL	TWR H24 APP 0800-1430					APP NIL	
Ørsta-Volda/Hovden	ENOV	0510-2225				0510-1915	0710-1415	1130-2225
Ålesund/Vigra	ENAL	0500-2230						

AD 3.3 Operational hours: ATS

[illegible]

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: Handling

AirPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	No detailed OPS HR, AVBL O/R							
Andøya/Andenes	ENAN	0400 - 1900					0700 - 1330	1130 - 2000	
Arendal/Gullknapp	ENGK	NIL							
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu MIL TFC FLO F Transport, Movement Control (+47) 77 89 66 00 / 77 89 66 03 / flotrans@mil.no							
Bergen/Flesland	ENBR	AVBL during HO RMK: Aviator (+47) 982 98 400 GA Partner (+47) 938 15 000 / ops@gapa.no Widerøe Ground Handling (+47) 64 82 65 02							
Berlevåg	ENBV	NIL							
Bodø	ENBO	AVBL during HO RMK: Widerøe Ground Handling (+47) 417 06 802 Aviator (+47) 948 26 655							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R RMK: Air Service (+47) 400 03 031							
Båtsfjord	ENBS	0600-2205					NIL	1430 - 2205	
Florø	ENFL	No detailed OPS HR, AVBL O/R RMK: Florø Flyservice (+47) 57 74 67 00							
prior tode/Bringeland	ENBL	0430 - 2200					0630 - 1500	1030 - 2200	
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R RMK: Widerøe (+47) 67 03 50 89							
Harstad/Narvik/Evenes	ENEV	NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R RMK: -							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R RMK: Aviator (+47) 400 02 444 / operations.hou@aviator.eu / (+47) 982 98 398 (Duty Manager) Widerøe Ground Handling (+47) 417 06 577 / handling.hou@wideroe.no							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R RMK: -							
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL O/R							
Kirkenes/Høybuktmoen	ENKR	AVBL within ATS OPS HR RMK: SAS Ground Handling (+47) 78 97 35 20 / kknhandling@sas.no							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling							
Kristiansund/Kvernberget	ENKB	NIL							
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 989 01 364							
Leknes	ENLK	O/R RMK: -							
Mehamn	ENMH	NIL							
Mo I Rana/Røssvoll	ENRA	NIL							
AirPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	RMK: Widerøe Ground Handling (+47) 417 06 671 Aviator (+47) 976 65 268							
Mosjøen/Kjærstad	ENMS	NIL O/R							
Namsos	ENNM	RMK: -							
Notodden/Tuven	ENNO	NIL							
Ny Ålesund/ Hamnerabben	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24 RMK: -							
Rygge	ENRY	AVBL RMK: -							
Røros	ENRO	No detailed OPS HR, AVBL O/R RMK: AD ADMIN Røros Flyservice (+47) 72 41 39 00							
Rørvik/Ryum	ENRM	AVBL by prior arrangement RMK: -							
Røst	ENRS	NIL							
Sandane/Ånda	ENSD	NIL							
Sandefjord/Torp	ENTO	No detailed OPS HR, AVBL RMK: REF ENTO AD 2.20							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R REF: AD ADMIN							
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R RMK: (+47) 57 62 82 52							
Stavanger/Sola	ENZV	AVBL H24 REF: Widerøe Ground Handling (+47) 64 82 65 02 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu SundtAir (+47) 400 41 010 / svg.handling@sundtair.com							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R REF: -							
AirPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815					0500 - 2115	0500 - 1915	CSLD 1100 - 1815
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	No detailed OPS HR, AVBL O/R REF: -							
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R REF: -					NIL	O/R	
Tromsø/Langnes	ENTC	AVBL for scheduled flights. Otherwise O/R: REF: WGH (+47) 64 82 69 04 / handling.tos@wideroe.no Aviator (+47) 77 28 04 00 / operations.tos@aviator.eu							
Trondheim/Værnes	ENVA	AVBL for scheduled flights. Otherwise O/R RMK: Aviator (+47) 74 60 20 10 WGH (+47) 64 82 67 10							
Vadsø	ENVD	0300 - 1330 / 1430 - 2330					1015 - 1445	0930 - 1300 / 1400 - 2400	
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130					NIL	1700 - 2130	
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	NIL							
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu							

AD 3.3 Operational hours

[illegible]

12.09.2019

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AD 2.3 Operational hours: De-icing								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0530-1800 / 2130-2400 RMK: (+47) 417 06 931 / (+47) 417 06 962					1200-1400	0730-2330
Andøya/Andenes	ENAN	No detailed OPS HR, AVBL O/R RMK: NIL						
Arendal/Gullknapp	ENGK	NIL						
Bardufoss	ENDU	No detailed OPS HR, AVBL O/R RMK: CIV TFC Bardufoss Ground Handling (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M						
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 01 MAY - 30 SEP AVBL O/R de-ice operator RMK: Aviator De-icing 0515 - 2315 (+47) 920 41 009 Widerøe Ground Handling 0530-2300 (O/R 2300-0530 (+47) 64 82 85 02						
Berlevåg	ENBV	No detailed OPS HR, AVBL O/R RMK: NIL						
Bodø	ENBO	HO RMK: Widerøe Ground Handling (+47) 417 06 818						
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R RMK: Air Service (+47) 400 03 031 / (+47) 989 01 346						
Båtsfjord	ENBS	No detailed OPS HR, AVBL O/R RMK: NIL						
Florø	ENFL	No detailed OPS HR, AVBL O/R RMK: Florø Flyservice (+47) 57 74 67 00						
prior tode/Bringeland	ENBL	0430 - 2200					0630 - 1500	1030 - 2200
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R RMK: NIL						
Harstad/Narvik/Evenes	ENEV	0500 - 2359	0001 - 0120 / 0500 - 2359				0001 - 0220 / 0445 - 1915	0500 - 2310
Hasvik	ENHK	No detailed OPS HR, AVBL O/R RMK: NIL						
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R RMK: NIL						
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R RMK: NIL						
Hønefoss/Eggemoen	ENEG	NIL						
Kirkenes/Høybuktnmoen	ENKR	Within ATS OPS, AVBL O/R RMK: SAS Ground Handling (+47) 957 15 809						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 989 01 364						
Leknes	ENLK	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 989 01 336						
Mehamn	ENMH	NIL						
Mo i Rana/Røssvoll	ENRA	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 989 01 355						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R RMK: -						
Mosjøen/Kjærstad	ENMS	0520 - 2050					0720 - 1550	0920 - 2050
Namsos	ENNM	NIL						
Notodden/Tuven	ENNO	NIL						
Ny Ålesund/ Hamnerabben	ENAS	NIL						
Oslo/Gardermoen	ENGM	AVBL H24 RMK: REF ENGM AD 2.20 para 11						
Rygge	ENRY	NIL						
Røros	ENRO	No detailed OPS HR, AVBL O/R RMK: AVBL O/R Røros Flyservice (+47) 72 43 39 00						
Rørвик/Ryum	ENRM	No detailed OPS HR, AVBL O/R RMK: AVBL by prior arrangement						
Røst	ENRS	No detailed OPS HR, AVBL O/R RMK: -						
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R RMK: -						
Sandefjord/Torp	ENTO	AVBL 0500 - 2200 RMK: REF ENTO AD 2.20						
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R RMK: -						
Sogndal/Haukåsén	ENSG	No detailed OPS HR, AVBL O/R RMK: Widerøe (+47) 57 62 82 52						
Stavanger/Sola	ENZV	AVBL H24 RMK: SGS (+47) 957 19 657 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu						
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R RMK: (+47) 989 01 457						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200 0000*
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	No detailed OPS HR, AVBL O/R RMK: -						
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R RMK: -						
Tromsø/Langnes	ENTC	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 64 82 69 04 / handling.tos@wideroe.no						
Trondheim/Værnes	ENVA	AVBL for scheduled flights. Otherwise O/R. RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) Aviator De-icing (+47) 910 02 980						
Vadsø	ENVD	0300 - 1330 / 1430 - 2330					1015 - 1445	0930 - 1300 / 1400 - 2400
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130					NIL	1700 - 2130
Ørland	ENOL	NIL						
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL O/R RMK: Hovden Flyekspedisjon A/S (+47) 70 04 56 00						
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 417 06 200						

AD 3.3 Operational hours:		De-icing						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				NIL			

AD 2.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Alta	ENAT	CAT 4 CAT 7	Outside published HR CAT 7 0600 - 2200					0600-1200	0900-2200	
Andøya/Andenes	ENAN	CAT 6 CAT 7	H24 O/R ATC MNM 12 HR prior to ETA							
Arendal/Gullknapp	ENGK		NIL							
Bardufoss	ENDU	CAT 7 CAT 8/9	H24 O/R ATC MNM 24 HR prior to ETA							
Bergen/Flesland	ENBR	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Berlevåg	ENBV	CAT 4	0630 - 2200					0600 - 1330	1030 - 1330	
Bodø	ENBO	CAT 7	H24							
Brønnøysund/Brønnøy	ENBN	CAT 4 CAT 5	0530-1940 For SKED DH8C TFC only					0930-1540	1130-1940	
Båtsfjord	ENBS	CAT 4	0600-2205					NIL	1430-2205	
Florø	ENFL	CAT 4	0510 - 2030				0615 - 2030	1225 - 1720	0815 - 0835 / 1235 - 2030	
prior tode/Bringeland	ENBL	CAT 4	0500-2230					0645-1530	1100-2200	
Hammerfest	ENHF	CAT 4	H24							
Harstad/Narvik/Evenes	ENEV	CAT 7 CAT 9	0500 - 2200 O/R ATC					0530 - 1300	0900 - 2230	
Hasvik	ENHK	CAT 4	0630-2115					NIL	1330-1530 / 1930-2115	
Haugesund/Karmøy	ENHD	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0510-2200					0600-2130	1000-2300	
Honningsvåg/Valan	ENHV	CAT 4	0435-2215					NIL	1700-2215	
Hønefoss/Eggemoen	ENEG	CAT 4	O/R							
Kirkenes/Høybuktnmoen	ENKR	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0600-2200					0800-1500	0800-2200	
Kjeller	ENKJ	CAT 6	O/R for MIL operations							
Kristiansand/Kjevik	ENCN	CAT 4 CAT 7 CAT 8	Outside published CAT 7 HR of OPR 0500-2205 Outside published CAT 7 HR of OPR, O/R ATC MNM 1 HR prior to ETA O/R ATC MNM 1 HR prior to ETA						0500-2245	
Kristiansund/Kvernberget	ENKB	CAT 4 CAT 7	- 0515-2200					0700-0900 0515-0700 / 0900-1530	- 1230-2200	
Lakselv/Banak	ENNA	CAT 4 CAT 7 CAT 9	Outside published CAT 7 HR of OPR 0500 - 2230 Outside published CAT 7 HR of OPR, O/R ATC prior to ETA O/R ATC MNM 48 HR prior to ETA					0500 - 2300 1000 - 1645	1030 - 2300	
Leknes	ENLK	CAT 4	0415 - 2140					0935 - 1240	0935 - 1230 / 1440 - 2140	
Mehamn	ENMH	CAT 4	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230	
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210					0535 - 1330	0945 - 1040 / 1315 - 2150	
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Molde/Årø	ENML	CAT 7	0520 - 2230					0530 - 2230	0600 - 1830	1000 - 2230
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2050					0720 - 1550	0920 - 2050	
Namsos	ENNM	CAT 4	0500 - 2100					0500 - 1100	1500 - 2100	
Notodden/Tuven	ENNO	CAT 3	O/R							
Ny Ålesund/ Hamnerabben	ENAS	CAT 3	Within AFIS HR of SER							
Oslo/Gardermoen	ENGM	CAT 9	H24							
Rygge	ENRY	CAT 3	O/R							
Røros	ENRO	CAT 4 CAT 5 CAT 6	For SCHED TFC and charter TFC. Other TFC on 10 MIN prior request AVBL O/R ATS MNM 48 HR prior to ETA							
Rørvik/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130					0700 - 1035	1320 - 2110	
Røst	ENRS	CAT4	0615 - 0815 / 1710 - 1910	0615 - 1910				0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315
Sandane/Anda	ENSD	CAT 4	0450-2130					0830-1500	1330-2130	
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200							
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130					0530 - 1245	1200 - 2200	
Sogndal/Haukåsen	ENSG	CAT 4	0500 - 2015					0805 - 1145	1030 - 2020	
Stavanger/Sola	ENZV	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Stokmarknes/Skagen	ENSK	CAT 4	0425 - 2135					1010 - 1500	1155 - 2135	
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Stord/Sørstokken	ENSO	CAT 4 CAT 5 CAT 6	For SCHED TFC AVBL O/R ADMIN MNM 48 HR prior to ETA							
Svalbard/Longyear	ENSB	CAT 4 CAT 7 RMK	0700-0930/ 1330-1600/ 2200-0000 0000-0100*/ 0930-1330/ 2200-0000*	0700-1100/ 1330-1600 0000-0100*/ 1100-1330	1330-1600 0930-1330	0730-1000/ 1330-1600 1000-1330	0730-0930/ 1330-1430 0930-1330/ 2200-0000*	- 0000-0100*	- 1130-1330/ 2200-0000*	
Svea	ENSA	CAT 3	AVBL O/R							
Svolvær/Helle	ENSH	CAT 4	0330 - 2135					0730 - 1450	0930 - 1330 / 1530 - 2135	
Sørkjosen	ENSR	CAT 4	0525 - 1945					NIL	1545 - 1945	
Tromsø/Langnes	ENTC	CAT 4 CAT 7 CAT 8	2300 - 0500 0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR) AVBL O/R H24							
Trondheim/Værnes	ENVA	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Vadsø	ENVD	CAT 4	0330 - 2400					1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400	
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130					NIL	1630 - 2130	
Ørland	ENOL	CAT 6 CAT 9	H24 AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20							
Ørsta-Volda/Hovden	ENOV	CAT 4	0510 - 2225					0510 - 1915	0710 - 1415	1130 - 2225
Ålesund/Vigra	ENAL	CAT 4 CAT 7	AVBL O/R outside CAT 7 HRS of OPR 0500 - 2230							

AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045 1345 - 1645