

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.
Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.
Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0700-1430					-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays					-	-
Arendal/Gullknapp	ENGK	0700-1400 EXC holidays					-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays					-	-
		MIL: H24 via Base/Wing Ops						
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
Bodø	ENBO	0700 - 1430 EXC holidays					-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays					-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays					-	-
Florø	ENFL	NIL						
Førde/Bringeland	ENBL	NIL						
Hammerfest	ENHF	0700 - 1400 EXC holidays					-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-
Hasvik	ENHK	0700 - 1400 EXC holidays					-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays					-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays					-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays					-	-
Kirkenes/Høybuktkmoen	ENKR	0700 - 1430 EXC holidays					-	-
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays					-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays					-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays					-	-
Leknes	ENLK	0700 - 1400 EXC holidays					-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
Mo I Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays					-	-
Namsos	ENNM	0700 - 1430 EXC holidays					-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays					-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays					-	-
Oslo/Gardermoen	ENGM	0700 - 1500					-	-
Rygge	ENRY	H24						
Røros	ENRO	0700 - 1400 EXC holidays					-	-
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	0800 - 1400 EXC holidays					-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays					-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays					-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays					-	-
Sogndal/Haukåsen	ENSG	0800 - 1400					-	-
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays 15 SEP - 14 MAY: 0700 - 1445 EXC holidays					-	-
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays					-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays					-	-
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays					-	-
Sørkjosen	ENSR	0700 - 1430 EXC holidays					-	-
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays					-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays					-	-
Vadsø	ENVD	0700 - 1500 EXC holidays					-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays					-	-
Ørland	ENOL	CIV: 0700 - 1400					-	-
Ørsta-Volda/Hovden	ENOV	0730 - 1430 EXC holidays					-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays					-	-

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	0630 - 1100 / 1330 - 1700					0630 - 1100	1330 - 1700

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges

Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				NIL			
Arendal/Gullknapp	ENGK				NIL			
Bardufoss	ENDU				NIL			
Bergen/Flesland	ENBR				H24			
Berlevåg	ENBV				NIL			
Bodø	ENBO				AVBL O/R to ATS 90 MIN prior to ETA			
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				AVBL O/R to ATS 4 HR prior to ETA			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				AVBL O/R to ATS 1 HR prior to ETA			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				AVBL O/R AD ADMIN			
Kirkenes/Høybuktmoen	ENKR				AVBL O/R to ATS 1 HR prior to ETA			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				AVBL O/R to ATS 1 HR prior to ETA			
Kristiansund/Kvernberget	ENKB				AVBL O/R to ATS 4 HR prior to ETA			
Lakselv/Banak	ENNA	O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48						
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo i Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	O/R to ATS 3 HR prior to ETA						
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO	O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.						
Ny Ålesund/ Hamnerabben	ENAS	Not required						
Oslo/Gardermoen	ENGM				H24			
Rygge	ENRY				REF AD 2.20			
Rørø	ENRO				AVBL 0700 - 1430 O/R to ATS 3 HR prior to ETA		NIL	NIL
Rørvik/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO				AVBL O/R to ATS 90 MIN prior to ETA. TEL +47 911 15 600			
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				0700 - 1430 2 HR prior notice required		NIL	NIL
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB	All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20						
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC				O/R 90 MIN prior notice via operator / handling agent			
Trondheim/Værnes	ENVA				AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00			
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				NIL			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				AVBL O/R to ATS 2 HR prior to ETA			

Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	NIL						
Andøya/Andenes	ENAN	H24						
Arendal/Gullknapp	ENGK	AVBL O/R to ATS						
Bardufoss	ENDU	0530-2200					0530-1440	0850-2230
Bergen/Flesland	ENBR	Bardufoss MET (+47) 67 03 44 85						
Berlevåg	ENBV	NIL						
Bodø	ENBO	H24						
Brønnøysund/Brønnøy	ENBN	Bodø MET (+47) 75 53 72 80						
Båtsfjord	ENBS	NIL						
Florø	ENFL	NIL						
Førde/Bringeland	ENBL	NIL						
Hammerfest	ENHF	NIL						
Harstad/Narvik/Evenes	ENEV	NIL						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	NIL						
Honningsvåg/Valan	ENHV	NIL						
Hønefoss/Eggemoen	ENEG	NIL						
Kirkenes/Høybukthømoen	ENKR	NIL						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	NIL						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	NIL						
Leknes	ENLK	NIL						
Mehamn	ENMH	NIL						
Mo i Rana/Røssvoll	ENRA	NIL						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	NIL						
Mosjøen/Kjærstad	ENMS	NIL						
Namsos	ENNM	NIL						
Notodden/Tuven	ENNO	NIL						
Ny Ålesund/ Hamnerabben	ENAS	NIL						
Oslo/Gardermoen	ENGM	NIL						
Rygge	ENRY	NIL						
Røros	ENRO	NIL						
Rørvik/Ryum	ENRM	NIL						
Røst	ENRS	NIL						
Sandane/Anda	ENSD	NIL						
Sandefjord/Torp	ENTO	NIL						
Sandnessjøen/Stokka	ENST	NIL						
Sogndal/Haukåsen	ENSG	NIL						
Stavanger/Sola	ENZV	NIL						
Stokmarknes/Skagen	ENSK	NIL						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	NIL						
Svalbard/Longyear	ENSB	0730 - 1400 EXC holiday					N/A	N/A
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	NIL						
Sørkjosen	ENSR	NIL						
Tromsø/Langnes	ENTC	NIL						
Trondheim/Værnes	ENVA	NIL						
Vadsø	ENVV	NIL						
Vardø/Svartnes	ENSS	NIL						
Ørland	ENOL	H24						
Ørsta-Volda/Hovden	ENOV	NIL						
Ålesund/Vigra	ENAL	NIL						

AD 2.3 Operational hours: Fuel				Revised per AIRAC 26.03.2020				
# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway. # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges. # Data with a yellow background is updated since last revision.								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	No detailed OPS HR, AVBL O/R						
		RMK: Within HR of SER AIR BP (+47) 917 22 590						
		Outside HR of SER: Air BP OOHs (+971) 5045 30326 / airbpoutehours@bp.com; or						
Andøya/Andenes	ENAN	0630-1430					NIL	NIL
		RMK: Public HOL Air BP (+47) 965 15 240						
Arendal/Gullknapp	ENGK	NIL						
Bardufoss	ENDU	0530-2200					0530-0830	1000-2100
		RMK: Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies						
Bergen/Flesland	ENBR	0400 - 2200					0400 - 2000	0400 - 2200
		RMK: Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433.						
Berlevåg	ENBV	AVBL O/R						
		100LL: H24						
Bodø	ENBO	JET A1: 0330 - 2030					0500 - 1500	0900 - 2100
		RMK: (+47) 75 52 03 79. Surcharge applies outside HR of OPER.						
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540	1130 - 1940
		RMK: -						
Båtsfjord	ENBS	0600 - 2205					NIL	1430 - 2205
		RMK: -						
Florø	ENFL	0510 - 2030				0615 - 2030	1225 - 1720	0815 - 0835 /
		RMK: -						
Førde/Bringeland	ENBL	0500 - 2230					0705 - 1445	1100 - 2200
		RMK: -						
Hammerfest	ENHF	H24						
		RMK: -						
Harstad/Narvik/Evenes	ENEV	0430 - 2100					0430 - 1300	0900 - 2100
		RMK: -						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	0545-2300					0545-2300	0700-2330
		AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22						
Honningsvåg/Valan	ENHV	0435-2215					NIL	1700-2215
		RMK: -						
Hønefoss/Eggemoen	ENEG	0600 - 1500					NIL	NIL
		RMK: EXC holidays						
Kirkenes/Høybuktnøen	ENKR	0315 - 1330 / 1750 - 2000					0855 - 1155	0855 - 1130 / 1800 - 2000
		RMK: Outside HR of OPS: O/R Air BP Norway AS (+47) 78 99 80 30 / Air BP OOHs (+971) 50 453 6032 / RocketRoute						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0430 - 1930					0430 - 1700	0430 - 1930
		RMK: -						
Kristiansund/Kvernberget	ENKB	0500 - 2000					0500 - 1500	1230 - 2000
		RMK: Within HR of OPS Shell (+47) 90 76 68 49						
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410	1100 - 2230
		RMK: Outside HR of OPS O/R (+47) 482 89 103						
Leknes	ENLK	AVBL O/R						
		RMK: -						
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
		RMK: -						
Mo i Rana/Røssvoll	ENRA	0455 - 1215 / 1320 - 2210					0535 - 1330	0945 - 1040 / 1315 - 2150
		RMK: -						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R						
		RMK: AVBL O/R for non-scheduled TFC						
		0520 - 2150					0820 - 1150	1120 - 2150
Mosjøen/Kjærstad	ENMS	RMK: -						
Namsos	ENNM	0500 - 2100					0500 - 1100	1500 - 2100
		RMK: -						
Notodden/Tuven	ENNO	AVBL H24						
		RMK: Key controlled pump station AVBL. BP card only						
Ny Ålesund/ Hamnerabben	ENAS	No detailed OPS HR, AVBL O/R by prior permission						
		RMK: -						
		100LL AVBL O/R 0500 - 2300					0800 - 1700	1000 - 1900
		RMK: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required						
Oslo/Gardermoen	ENGM	JET A1 AVBL H24						
		RMK: (+47) +64 81 08 08 / dispatch@gfs.no						
		F34 AVBL H24						
		RMK: MIL OPS (+47) 64 80 33 35 / 131.250 MHZ						
Rygge	ENRY	AVBL O/R H24						
		RMK: WingOps						
Røros	ENRO	0530 - 1420 / 1730 - 1820				0530 - 1420 /	NIL	1300 - 1820
		RMK: Within HR of OPS Avinor (+47) 911 97 919						
Rørвик/Ryum	ENRM	0515 - 1100 / 1400 - 2130					0700 - 1035	1320 - 2110
		RMK: -						
Røst	ENRS	0615 - 0815 / 1700 - 1900	0615 - 1910 / 0615 - 0815 / 1710 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315
		RMK: -						
Sandane/Anda	ENSD	0510 - 2050					0820 - 1400	1220 - 2050
		RMK: -						
Sandefjord/Torp	ENTO	Fuel truck AVBL in period 30 MIN prior to first SCHED DEP until 30 MIN after last SCHED DEP.						
		RMK: Within HR of OPS: Fuel coordinator (+47) 33 48 63 44						
		Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com						
Sandnessjøen/Stokka	ENST	0430 - 2130					0530 - 1245	1120 - 2200
		RMK: -						
Sogndal/Haukåsen	ENSG	0500-2015					0805-1145	1030-2020
		RMK: -						
Stavanger/Sola	ENZV	0400 - 2100					0700 - 1930	0400 - 2130
		RMK: Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519						
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R						
		RMK: -						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
		RMK: O/R 2 HR prior notice to ATS						
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*
		RMK: See "Fire & Rescue Service" for description of annotation *						
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0330-2135				0415-2135	0730-1250	1130 - 1330/
		RMK: -						
Spørkjosen	ENSR	0445-1945					NIL	1115-1315 /
		RMK: -						
Tromsø/Langnes	ENTC	0500 - 2230					0500 - 1600	0730 - 2300
		RMK: Within HR of OPS Flytanking AS (+47) 77 67 00 25/56, FAX (+47) 77 67 35 28						
Trondheim/Værnes	ENVA	H24						
		RMK: Securitas (+47) 941 65 959						
Vadsø	ENVD	0330-2400					1020 - 1500	0920 - 1310 /
		RMK: -						
Vardø/Svartnes	ENSS	0730-2130					NIL	1700 - 2130
		RMK: -						
Ørland	ENOL	0700 - 1500 EXC holidays					NIL	NIL
		RMK: Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only.						
Ørsta-Volda/Hovden	ENOV	0505 - 2240					0545 - 0950 / 1640 - 1710	1145 - 2240
Ålesund/Vigra	ENAL	0400 - 2230						0400 - 2300
		RMK: Outside opening HR O/R prior to closing						

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

Airport	ICAO	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Alta	ENAT	0530-1800 / 2130-2400					1200-1400	0730-2330
Andøya/Andenes	ENAN	RMK: (+47) 417 06 931 / (+47) 417 06 962						
Arendal/Gullknapp	ENGK	No detailed OPS HR, AVBL O/R						
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M						
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 01 MAY - 30 SEP AVBL O/R de-ice operator RMK: Aviator De-icing 0515 - 2315 (+47) 920 41 009 Widerøe Ground Handling 0530-2300 O/R 2300-0530 (+47) 64 82 85 02						
Berlevåg	ENBV	No detailed OPS HR, AVBL O/R						
Bodø	ENBO	RMK: NIL						
Brønnøysund/Brønnøy	ENBN	HO						
Båtsfjord	ENBS	RMK: Widerøe Ground Handling (+47) 417 06 818						
Florø	ENFL	No detailed OPS HR, AVBL O/R						
Førde/Bringeland	ENBL	RMK: Air Service (+47) 400 03 031 / (+47) 989 01 346						
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R						
Harstad/Narvik/Evenes	ENEV	0500 - 2359	0001 - 0120 / 0500 - 2359					0001 - 0220 / 0445 - 1915
Hasvik	ENHK	RMK: NIL						
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R						
Honningsvåg/Valan	ENHV	RMK: NIL						
Hønefoss/Eggemoen	ENEG	NIL						
Kirkenes/Høybuktnmoen	ENKR	Within ATS OPS, AVBL O/R						
Kjeller	ENKJ	RMK: Widerøe Ground Handling handling.kkn@wideroe.no						
Kristiansand/Kjevik	ENCN	NIL						
Kristiansund/Kvernberget	ENKB	No detailed OPS HR, AVBL O/R						
Lakselv/Banak	ENNA	RMK: Widerøe Ground Handling (+47) 989 01 364						
Leknes	ENLK	No detailed OPS HR, AVBL O/R						
Mehamn	ENMH	RMK: Widerøe Ground Handling (+47) 989 01 336						
Mo i Rana/Røssvoll	ENRA	NIL						
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R						
Mosjøen/Kjærstad	ENMS	RMK: -						
Namsos	ENNM	0520 - 2050						
Notodden/Tuven	ENNO	0720 - 1550						
Ny Ålesund/Hamnerabben	ENAS	0920 - 2050						
Oslo/Gardermoen	ENGM	No detailed OPS HR, AVBL for SCHED TFC and AMB						
Rygge	ENRY	NIL						
Røros	ENRO	No detailed OPS HR, AVBL O/R						
Rørvik/Ryum	ENRM	RMK: AVBL O/R Røros Flyservice (+47) 72 41 39 00						
Røst	ENRS	No detailed OPS HR, AVBL O/R						
Sandane/Anda	ENSD	RMK: AVBL by prior arrangement						
Sandefjord/Torp	ENTO	No detailed OPS HR, AVBL O/R						
Sandnessjøen/Stokka	ENST	RMK: -						
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R						
Stavanger/Sola	ENZV	RMK: Widerøe (+47) 57 62 82 52						
Stokmarknes/Skagen	ENSK	AVBL H24						
		RMK: SGS (+47) 957 19 657						
		Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu						
		No detailed OPS HR, AVBL O/R						
		RMK: (+47) 989 01 457						
Airport	ICAO	Mon	Tue	Wed	Thu	Fri	Sat	Sun
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*
Svea	ENSA	RMK: See "Fire & Rescue Service" for description of annotation *						
Svolvær/Helle	ENSH	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135
Sørkjosen	ENSR	RMK: -						
Tromsø/Langnes	ENTC	No detailed OPS HR, AVBL O/R						
Trondheim/Værnes	ENVA	RMK: Widerøe Ground Handling (+47) 64 82 69 04 / handling.tos@wideroe.no						
		AVBL for scheduled flights. Otherwise O/R.						
		RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night)						
		Aviator De-icing (+47) 910 02 980						
Vadsø	ENVD	0300 - 1330 / 1430 - 2330					1015 - 1445	0930 - 1300 / 1400 - 2400
Vardø/Svartnes	ENSS	RMK: -						
Ørland	ENOL	0730 - 1230 / 1700 - 2130						
Ørsta-Volda/Hovden	ENOV	NIL						
		No detailed OPS HR, AVBL H24 O/R						
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no						
Ålesund/Ålora	ENAI	No detailed OPS HR, AVBL O/R						

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.
Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.
Data with a yellow background is updated since last revision.

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun			
Alta	ENAT	CAT 4 CAT 7	Outside published HR CAT 7 0600 - 2200					0600-1200	0900-2200			
Andøya/Andenes	ENAN	CAT 6 CAT 7	H24 O/R ATC MNM 12 HR prior to ETA									
Arendal/Gullknapp	ENGK		NIL									
Bardufoss	ENDU	CAT 7 CAT 8/9	H24 O/R ATC MNM 24 HR prior to ETA									
Bergen/Flesland	ENBR	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA									
Berlevåg	ENBV	CAT 4	0630 - 2200					0600 - 1330	1030 - 1330			
Bodø	ENBO	CAT 7	H24									
Brønnøysund/Brønnøy	ENBN	CAT 4 CAT 5	0530-1940 For SKED DH8C TFC only					0930-1540	1130-1940			
Båtsfjord	ENBS	CAT 4	0600-2205					NIL	1430-2205			
Florø	ENFL	CAT 4	0510 - 2030				0615 - 2030	1225 - 1720	0815 - 0835 / 1235 - 2030			
Førde/Bringeland	ENBL	CAT 4	0500-2230					0645-1530	1100-2200			
Hammerfest	ENHF	CAT 4	H24									
Harstad/Narvik/Evenes	ENEV	CAT 7 CAT 9	0500 - 2200 O/R ATC					0530 - 1300	0900 - 2230			
Hasvik	ENHK	CAT 4	0630-2115					NIL	1330-1530 / 1930-2115			
Haugesund/Karmøy	ENHD	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0545-2300							0545-2300	0700-2330	
Honningsvåg/Valan	ENHV	CAT 4	0435-2215					NIL	1700-2215			
Hønefoss/Eggemoen	ENEG	CAT 4	O/R									
Kirkenes/Høybuktmoen	ENKR	CAT 4 CAT 7	Outside published CAT 7 HR of OPR 0600-2200					0800-1500	0800-2200			
Kjeller	ENKJ	CAT 6	O/R for MIL operations									
Kristiansand/Kjevik	ENCN	CAT 4	Outside published CAT 7 HR of OPR 0500-2205							0500-2245		
		CAT 7	Outside published CAT 7 HR of OPR, O/R ATC MNM 1 HR prior to ETA O/R ATC MNM 1 HR prior to ETA									
		CAT 8										
Kristiansund/Kvernberget	ENKB	CAT 4						1200 - 1900				
		CAT 7	0450-2200	0515 - 2220				0600 -1200 / 1900 - 2000	0800 - 2245			
Lakselv/Banak	ENNA	CAT 4	Outside published CAT 7 HR of OPR 0500 - 2230							0500 - 2300	1000 - 1645	1030 - 2300
		CAT 7	Outside published CAT 7 HR of OPR, O/R ATC prior to ETA O/R ATC MNM 48 HR prior to ETA									
		CAT 9										
Leknes	ENLK	CAT 4	0415 - 2140					0935 - 1240	0935 - 1230 / 1440 - 2140			
Mehamn	ENMH	CAT 4	0320-2315					CLSD	1550-2310			
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210					0535 - 1330	0945 - 1040 / 1315 - 2150			
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun			
Molde/Årø	ENML	CAT 7	0510 - 2200					0530 - 2000	0850 - 2230			
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2150					0820 - 1150	1120 - 2150			
Namsos	ENNM	CAT 4	0500 - 2100					0500 - 1100	1500 - 2100			
Notodden/Tuven	ENNO	CAT 3	O/R									
Ny Ålesund/ Hamnerabben	ENAS	CAT 3	Within AFIS HR of SER									
Oslo/Gardermoen	ENGM	CAT 9	H24									
Rygge	ENRY	CAT 3	O/R									
Røros	ENRO	CAT 4	For SCHED TFC and charter TFC. Other TFC on 10 MIN prior request									
		CAT 5										
		CAT 6	AVBL O/R ATS MNM 48 HR prior to ETA									
Rørvik/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130					0700 - 1035	1320 - 2110			
Røst	ENRS	CAT4	0615 - 0815 / 1710 - 1910	0615 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315			
Sandane/Anda	ENSD	CAT 4	0450-2130					0830-1500	1330-2130			
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200									
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130					0530 - 1245	1200 - 2200			
Sogndal/Haukåsen	ENSG	CAT 4	0500 - 2015					0805 - 1145	1030 - 2020			
Stavanger/Sola	ENZV	CAT 7	H24									
		CAT 9	O/R ATC MNM 30 MIN prior to ETA									
Stokmarknes/Skagen	ENSK	CAT 4	0410-1915		0410-2150	0720-2150		1000-1300	1150-2150			
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun			
Stord/Sørstokken	ENSO	CAT 4	For SCHED TFC									
		CAT 5										
		CAT 6	AVBL O/R ADMIN MNM 48 HR prior to ETA									
Svalbard/Longyear	ENSB	CAT 4	0700-0930/ 1330-1600/ 2200-0000	0700-1100/ 1330-1600	1330-1600	0730-1000/ 1330-1600	0730-0930/ 1330-1430	-	-			
		CAT 7	0000-0100*/ 0930-1330/ 2200-0000*	0000-0100*/ 1100-1330	0930-1330	1000-1330	0930-1330/ 2200-0000*	0000-0100*	1130-1330/ 2200-0000*			
		RMK	* Only SEP 2nd, 3rd, 7th, 9th, 14th. and 21st									
Svea	ENSA	CAT 3	AVBL O/R									
Svolvær/Helle	ENSH	CAT 4	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135			
Sørkjosen	ENSR	CAT 4	0445-1945					NIL	1115-1315 /			
Tromsø/Langnes	ENTC	CAT 4	2300 - 0500									
		CAT 7	0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR)									
		CAT 8	AVBL O/R H24									
Trondheim/Værnes	ENVA	CAT 7	H24									
		CAT 9	O/R ATC MNM 30 MIN prior to ETA									
Vadsø	ENVD	CAT 4	0330 - 2400					1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400			
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130					NIL	1630 - 2130			
Ørland	ENOL	CAT 6	H24									
		CAT 9	AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20									
Ørsta-Volda/Hovden	ENOV	CAT 4	0505 - 2240					0545 - 0950 / 1640 - 1710	1145 - 2240			
Ålesund/Vigra	ENAL	CAT 4	AVBL O/R outside CAT 7 HRS of OPR									
		CAT 7	0500 - 2230									

AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045 1345 - 1645