

## AD 2.3 Operational hours: AD administration

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0700-1430					-	-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays					-	-	-
Arendal/Gullknapp	ENGL	0700-1400 EXC holidays					-	-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays					-	-	-
		MIL: H24 via Base/Wing Ops							
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-	-
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-	-
Bodø	ENBO	0700 - 1430 EXC holidays					-	-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays					-	-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays					-	-	-
Florø	ENFL	NIL							
Førde/Bringeland	ENBL	NIL							
Hammerfest	ENHF	0700 - 1400 EXC holidays					-	-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-	-
Hasvik	ENHK	0700 - 1400 EXC holidays					-	-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays					-	-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays					-	-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays					-	-	-
Kirkenes/Høybukta	ENKR	0700 - 1430 EXC holidays					-	-	-
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays					-	-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays					-	-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays					-	-	-
Leknes	ENLK	0700 - 1400 EXC holidays					-	-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230	
Mo i Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays					-	-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-	-
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays					-	-	-
Namsos	ENNM	0700 - 1430 EXC holidays					-	-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays					-	-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays					-	-	-
Oslo/Gardermoen	ENGM	0700 - 1500					-	-	-
Rygge	ENRY	H24							
Røros	ENRO	0700 - 1400 EXC holidays					-	-	-
Rørвик/Ryum	ENRM	NIL							
Røst	ENRS	0800 - 1400 EXC holidays					-	-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays					-	-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays					-	-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays					-	-	-
Sogndal/Haukåsen	ENSG	0800 - 1400					-	-	-
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays 15 SEP - 14 MAY: 0700 - 1445 EXC holidays					-	-	-
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays					-	-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays					-	-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays					-	-	-
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays					-	-	-
Sørkjosen	ENSR	0700 - 1430 EXC holidays					-	-	-
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays					-	-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays					-	-	-
Vadsø	ENVD	0700 - 1500 EXC holidays					-	-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays					-	-	-
Ørland	ENOL	CIV: 0700 - 1400					-	-	-
Ørsta-Volda/Hovden	ENOV	0730 - 1430 EXC holidays					-	-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays					-	-	-

## AD 3.3 Operational hours: AD administration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Værøy	ENVR	0630 - 1100 / 1330 - 1700					0630 - 1100	1330 - 1700	

**AD 2.3 Operational hours: Customs and immigration**
**Revised per AIRAC 23.04.2020**

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				NIL			
Arendal/Gullknapp	ENGK				NIL			
Bardufoss	ENDU				NIL			
Bergen/Flesland	ENBR				H24			
Berlevåg	ENBV				NIL			
Bodø	ENBO				AVBL O/R to ATS 90 MIN prior to ETA			
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				AVBL O/R to ATS 4 HR prior to ETA			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				AVBL O/R to ATS 1 HR prior to ETA			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				AVBL O/R AD ADMIN			
Kirkenes/Høybukta	ENKR				AVBL O/R to ATS 1 HR prior to ETA			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				AVBL O/R to ATS 1 HR prior to ETA			
Kristiansund/Kvernberget	ENKB				AVBL O/R to ATS 4 HR prior to ETA			
Lakselv/Banak	ENNA	O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48						
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo i Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	O/R to ATS 3 HR prior to ETA						
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO	O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.						
Ny Ålesund/ Hamnerabben	ENAS	Not required						
Oslo/Gardermoen	ENGM				H24			
Rygge	ENRY	REF AD 2.20						
Røros	ENRO				AVBL 0700 - 1430 O/R to ATS 3 HR prior to ETA		NIL	NIL
Rørвик/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO	AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice via operator/handling agent, or to customs (+47) 911 15 600 for flights not subject to mandatory handling.						
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV	AVBL H24						
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB	All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20						
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC	O/R 90 MIN prior notice via operator / handling agent						
Trondheim/Værnes	ENVA	AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00						
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				NIL			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL	AVBL O/R to ATS 2 HR prior to ETA						

**AD 3.3 Operational hours: Customs and immigration**

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				NIL			

**AD 2.3 Operational hours: MET Office**

Revised per AIRAC 02.01.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				H24			
Arendal/Gullknapp	ENGK				AVBL O/R to ATS			
Bardufoss	ENDU			0530-2200			0530-1440	0850-2230
				Bardufoss MET (+47) 67 03 44 85				
Bergen/Flesland	ENBR				NIL			
Berlevåg	ENBV				NIL			
Bodø	ENBO				H24			
				Bodø MET (+47) 75 53 72 80				
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				NIL			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				NIL			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				NIL			
Kirkenes/Høybuktmoen	ENKR				NIL			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				NIL			
Kristiansund/Kvernberget	ENKB				NIL			
Lakselv/Banak	ENNA				NIL			
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo I Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML				NIL			
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO				NIL			
Ny Ålesund/ Hamnerabben	ENAS				NIL			
Oslo/Gardermoen	ENGM				NIL			
Rygge	ENRY				NIL			
Røros	ENRO				NIL			
Rørвик/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO				NIL			
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				NIL			
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB			0730 - 1400 EXC holiday			N/A	N/A
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC				NIL			
Trondheim/Værnes	ENVA				NIL			
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				H24			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				NIL			

**AD 3.3 Operational hours: MET Office**

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				O/R MWO Tromsø TEL (+47) 77 62 13 00			

AD 2.3 Operational hours: ATS

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT			0540 - 2330			0640 - 1800	0930 - 2330	
Andøya/Andenes	ENAN			0415 - 2130			0745 - 1545	1000 - 1300 / 1700 - 2200	
Arendal/Gullknapp	ENGL				0700-1400				
Bardufoss	ENDU			0530-2200			0530-1440	0850 - 2230	
Bergen/Flesland	ENBR				AVBL H24				
Berlevåg	ENBV			0500-2115			NIL	1845 - 2115	
Bodø	ENBD				AVBL H24				
Brønnøysund/Brønnøy	ENBN			0530 - 1940			0930 - 1540	1130 - 1940	
Båtsfjord	ENBS			0600-2205			NIL	1430 - 2205	
Florø	ENFL			0435 - 2030		0550 - 2030	0755-0835 / 1150-1710	0755 - 0835 / 1425 - 2030	
Førde/Bringeland	ENBL			0510-2210			0705 - 1445	1100 - 2200	
Hammerfest	ENHF			H24			0000 - 1430	1020 - 2400	
Harstad/Narvik/Evenes	ENEV			0510-2400			0530-1240 / 1820-1940	0820-2240	
Hasvik	ENHK			0630-2115			NIL	1330-1530 / 1930-2115	
Haugesund/Karmøy	ENHD			0500-2100			0600-2130	0720-2230	
Honningsvåg/Valan	ENHV			0435-2215			NIL	1700-2215	
Hønefoss/Eggemoen	ENEG			No ATS service provided					
Kirkenes/Høybukta	ENKR			0330 - 2400			0900 - 1500	0900 - 2400	
Kjeller	ENKJ			Not ATS service provided					
Kristiansand/Kjevik	ENCN			0510 - 2215			0510 - 2110	0510 - 2215	
Kristiansund/Kvernberget	ENKB			0450 - 2220			0515 - 2220	0600 - 2000	
Lakselv/Banak	ENNA			0500 - 2230			0500 - 1410	1100 - 2230	
Leknes	ENLK			0415 - 2140			0935 - 1240	0935 - 2140	
Mehamn	ENMH			0320-1410 / 1550-2315			CLSD	1550-2315	
Mo i Rana/Røssvoll	ENRA			0450 - 2210			0535 - 1355	0910 - 2150	
Molde/Årø	ENML			0510 - 2200			0530 - 2000	0850 - 2230	
Mosjøen/Kjærstad	ENMS			0520 - 2150			0620 - 1450	1120 - 2150	
Namsos	ENNM			0500 - 2100			0500 - 1100	1500 - 2100	
Notodden/Tuven	ENNO			0600-1800			1030-1600	1330-1800	
Ny Ålesund/ Hamnerabben	ENAS			No detailed HR of OPS, AFIS AVBL in accordance with PPR. RMK: Contact Kings Bay Ltd. or Longyear AFIS, REF ENSB					
Osla/Gardermoen	ENGM			H24					
Rygge	ENRY			0700 - 1900			0700 - 1900	0800 - 1500	
Røros	ENRO			0530 - 1420			0530 - 1420	1300 - 1820	
Rørvik/Ryum	ENRM			0515 - 2130			0700 - 1035	1320 - 2110	
Røst	ENRS			0615 - 0815 / 1710 - 1910			0615 - 0815 / 1710 - 1910	1115 - 1315	
Sandane/Anda	ENSD			0450-2130			0830-1510	1250-2130	
Sandefjord/Torp	ENTO			0500 - 2200					
Sandnessjøen/Stokka	ENST			0350 - 2130			0530 - 1300	1120 - 2200	
Sogndal/Haukåsen	ENSG			0500 - 2015			0805 - 1145	1030 - 2020	
Stavanger/Sola	ENZV			AVBL H24					
Stokmarknes/Skagen	ENSK			0410-1915			0410-2150	0720-2150	
Stord/Sørstokken	ENSO			0500-1815			0500 - 2115	0500 - 1915	
Svalbard/Longyear	ENSB			H24					
Svea	ENSA			AFIS AVBL O/R or PPR					
Svolvær/Helle	ENSH			0330-2135			0415-2135	0730-1250	
Sørkjosen	ENSR			0445-1945			NIL	1115-1315 / 1645-1945	
Tromsø/Langnes	ENTC			H24					
Trondheim/Værnes	ENVA			H24					
Vadsø	ENVD			0330-2400			1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400	
Vardø/Svartnes	ENSS			0730-2130			NIL	1700 - 2130	
Ørland	ENOL			APP 0800-1430			APP NIL		
Ørsta-Volda/Hovden	ENOV			0505 - 2240			0545 - 0950 / 1640 - 1710	1145 - 2240	
Ålesund/Vigra	ENAL			0500-2230					

AD 3.3 Operational hours: ATS

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Værøy	ENVR			FIS AVBL H24 via Bodø ATCC					
				RMK: -					

AD 2.3 Operational hours: Fuel

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	No detailed OPS HR, AVBL O/R						
		RMK: Within HR of SCR AIP BP (+47) 917 22 590 Outside HR of SER: Air BP OOHs (+971) 5045 30326 / airbpoutofhours@bp.com; or						
Andøya/Andenes	ENAN	0630-1430		NIL		NIL		NIL
		RMK: Public HDL Air BP (+47) 965 15 240						
Arendal/Gullknapp	ENGG	NIL						
Bardufoss	ENDU	0530-2200		0530-0830		1000-2100		
		RMK: Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies						
Bergen/Flesland	ENBR	0400 - 2200		0400 - 2000		0400 - 2200		
		RMK: Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433.						
Berlevåg	ENBV	AVBL O/R						
		100LL: H24						
Bodø	ENBO	JET A1: 0330 - 2030		0500 - 1500		0900 - 2100		
		RMK: (+47) 75 52 03 79. Surcharge applies outside HR of OPER.						
Brønnøysund/Brønnøy	ENBN	0530 - 1940		0930 - 1540		1130 - 1940		
		RMK: -						
Båtsfjord	ENBS	0600 - 2205		NIL		1430 - 2205		
		RMK: -						
Florø	ENFL	0510 - 2030		0615 - 2030		1225 - 1720		0815 - 0835 /
		RMK: -						
Førde/Bringeland	ENBL	0500 - 2230		0705 - 1445		1100 - 2200		
		RMK: -						
Hammerfest	ENHF	H24						
		RMK: -						
Harstad/Narvik/Evenes	ENEV	0430 - 2100		0430 - 1300		0900 - 2100		
		RMK: -						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	0545-2300		0545-2300		0700-2330		
		AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22						
Honningsvåg/Valan	ENHV	0435-2215		NIL		1700-2215		
		RMK: -						
Hønefoss/Eggemoen	ENEG	0600 - 1500		NIL		NIL		
		RMK: EXC holidays						
Kirkenes/Høybuktaemoen	ENKR	0315 - 1330 / 1750 - 2000		0855 - 1155		0855 - 1130 / 1300 - 2000		
		RMK: Outside HR of OPS: O/R Air BP Norway AS (+47) 78 99 80 30 / Air BP OOHs (+971) 50 453 6032 / RocketRoute						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0430 - 1930		0430 - 1700		0430 - 1930		
		RMK: -						
Kristiansund/Kvernberget	ENKB	0500 - 2000		0500 - 1500		1230 - 2000		
		RMK: Within HR of OPS Shell (+47) 90 76 68 49						
Lakselv/Banak	ENNA	0500 - 2230		0500 - 1410		1100 - 2230		
		RMK: Outside HR of OPS O/R (+47) 482 89 103						
Leknes	ENLK	AVBL O/R						
		RMK: -						
Mehamn	ENMH	0350 - 1410 / 1530 - 2230		0450 - 0700 / 1120 - 1400		1520 - 2230		
		RMK: -						
Mo i Rana/Røssvoll	ENRA	0455 - 1215 / 1320 - 2210		0535 - 1330		0945 - 1040 / 1315 - 2150		
		RMK: -						
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R						
		RMK: AVBL O/R for non-scheduled TFC						
Mosjøen/Kjærstad	ENMS	0520 - 2150		0820 - 1150		1120 - 2150		
		RMK: -						
Namsos	ENNM	0500 - 2100		0500 - 1100		1500 - 2100		
		RMK: -						
Notodden/Tuven	ENNO	AVBL H24						
		RMK: Key controlled pump station AVBL BP card only						
Ny Ålesund/ Hamnerabben	ENAS	No detailed OPS HR, AVBL O/R by prior permission						
		RMK: -						
		100LL AVBL O/R 0500 - 2300		0800 - 1700		1000 - 1900		
		RMK: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required						
		JET A1 AVBL H24						
		RMK: (+47) +64 82 08 08 / dispatch@gfs.no						
		F34 AVBL H24						
		RMK: MIL OPS (+47) 64 80 33 35 / 131.250 MHZ						
Rygge	ENRY	AVBL O/R H24						
		RMK: WingOps						
Røros	ENRO	0530 - 1420 / 1730 - 1820		0530 - 1420 /		NIL		1300 - 1820
		RMK: Within HR of OPS Avinor (+47) 911 97 919						
Rørvik/Ryum	ENRM	0515 - 1100 / 1400 - 2130		0700 - 1035		1320 - 2110		
		RMK: -						
Røst	ENRS	0615 - 0815 / 1700 - 1900		0615 - 1910 / 0615 - 0815 / 1710 - 1910		0615 - 0815		1115 - 1315
		RMK: -						
Sandane/Anda	ENSD	0510 - 2050		0820 - 1400		1220 - 2050		
		RMK: -						
		Fuel truck AVBL in period 30 MIN prior to first SCHED DEP until 30 MIN after last SCHED DEP.						
Sandefjord/Torp	ENTO	RMK: Within HR of OPS: Fuel coordinator (+47) 33 48 63 44 Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com						
Sandnessjøen/Stokka	ENST	0430 - 2130		0530 - 1245		1120 - 2200		
		RMK: -						
Sogndal/Haukåsen	ENSG	0500-2015		0805-1145		1030-2020		
		RMK: -						
Stavanger/Sola	ENZV	0400 - 2100		0700 - 1930		0400 - 2130		
		RMK: Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519						
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R						
		RMK: -						
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>
Stord/Sørstokken	ENSO	0500-1815		0500 - 2115		0500 - 1915		1100 - 1815
		RMK: O/R 2 HR prior notice to ATS						
Svalbard/Longyear	ENSB	0000-0100 / 0700-1600 / 2200-0000*		0930-1600		0730-1600 / 2200-0000*		1130-1330 / 2200-0000*
		RMK: See "Fire & Rescue Service" for description of annotation *						
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0330-2135		0415-2135		0730-1250		1130 - 1330 /
		RMK: -						
Sørkjosen	ENSR	0445-1945		NIL		1115-1315 /		
		RMK: -						
Tromsø/Langnes	ENTC	0500 - 2230		0500 - 1600		0730 - 2300		
		RMK: Within HR of OPS Flytanking AS (+47) 77 67 00 25/56, FAX (+47) 77 67 35 28						
Trondheim/Værnes	ENVA	H24						
		RMK: Securitas (+47) 941 65 959						
Vadsø	ENVD	0330-2400		1020 - 1500		0920 - 1310 /		
		RMK: -						
Vardø/Svartnes	ENSS	0730-2130		NIL		1700 - 2130		
		RMK: -						
Ørland	ENOL	0700 - 1500 EXC holidays						
		RMK: Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only						
Ørsta-Volda/Hovden	ENOV	0505 - 2240		0545 - 0950 / 1640 - 1710		1145 - 2240		
		RMK: -						
Ålesund/Vigra	ENAL	0400 - 2230		0400 - 2300				
		RMK: Outside opening HR O/R prior to closing						

AD 3.3 Operational hours: Fuel

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	NIL						

AD 2.3 Operational hours: Handling

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	No detailed OPS HR, AVBL O/R						
Andøya/Andenes	ENAN	RMK: (+47) 417 06 956 / (+47) 417 06 955			0400 - 1900		0700 - 1330	1130 - 2000
Arendal/Gullknapp	ENGL	NIL						
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu 0730-1530 O/R O/R MIL TFC FLO Forsyning Transport (Air Movement & Transportation)						
Bergen/Flesland	ENBR	RMK: Aviator (+47) 982 98 400 GA Partner (+47) 938 15 000 / ops@gapa.no Widerøe Ground Handling (+47) 64 82 65 02						
Berlevåg	ENBV	NIL						
Bodø	ENBO	RMK: Widerøe Ground Handling (+47) 417 06 802 Aviator (+47) 948 26 655						
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R						
Båtsfjord	ENBS	RMK: Air Service (+47) 400 03 031						
Florø	ENFL	0600-2205 NIL 1430 - 2205						
Fårde/Bringeland	ENBL	RMK: Florø Flyservice (+47) 57 74 67 00						
Hammerfest	ENHF	RMK: -						
Harstad/Narvik/Evenes	ENEV	No detailed OPS HR, AVBL O/R						
Hasvik	ENHK	NIL						
Haugesund/Karmøy	ENHD	RMK: Aviator (+47) 400 02 444 / operations.hau@aviator.eu / (+47) 982 98 398 (Duty Manager) Widerøe Ground Handling (+47) 417 06 577 / handling.hau@wideroe.no						
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R						
Hønefoss/Eggemoen	ENEG	RMK: -						
Kirkenes/Høybukta	ENKR	No detailed OPS HR, AVBL O/R						
Kjeller	ENKJ	AVBL within ATS OPS HR						
Kristiansand/Kjevik	ENCN	RMK: Widerøe Ground Handling handling.kkn@wideroe.no						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R						
Leknes	ENLK	RMK: Widerøe Ground Handling (+47) 989 01 364						
Mehamn	ENMH	O/R						
Mo I Rana/Ræsvoll	ENRA	RMK: -						
Molde/Årø	ENML	NIL						
Mosjøen/Kjærstad	ENMS	No detailed OPS HR, AVBL O/R						
Namsos	ENNM	O/R						
Notodden/Tuven	ENNO	RMK: -						
Ny Ålesund/	ENAS	NIL						
Oslo/Gardermoen	ENGM	AVBL H24						
Rygge	ENRY	RMK: -						
Røros	ENRO	No detailed OPS HR, AVBL O/R						
Rørвик/Ryum	ENRM	RMK: AD ADMIN						
Røst	ENRS	Røros Flyservice (+47) 72 41 39 00						
Sandane/Anda	ENSD	AVBL by prior arrangement						
Sandefjord/Torp	ENTO	RMK: -						
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R						
Sogndal/Haukåsen	ENSG	REF: AD ADMIN						
Stavanger/Sola	ENZV	RMK: (+47) 57 62 82 52						
Stokmarknes/Skagen	ENSK	AVBL H24						
Stord/Sørstokken	ENSO	REF: Widerøe Ground Handling (+47) 64 82 65 02 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu SundtAir (+47) 400 41 010 / svg.handling@sundtair.com						
Svalbard/Longyear	ENSB	No detailed OPS HR, AVBL O/R						
Svea	ENSA	REF: -						
Svolvær/Helle	ENSH	0500-1815 0500 - 2115 0500 - 1915 CSLD 1100 - 1815						
Sørkjosen	ENSR	0000-0100/ 0700-1600/ 2200-0000* 0000-0100* / 0700-1600 0930-1600 0730-1600 0730-1430/ 2200-0000* 0000-0100 1130-1330/ 2200-0000*						
Tromsø/Langnes	ENTC	RMK: See "Fire & Rescue Service" for description of annotation *						
Trondheim/Værnes	ENVA	0330-2135 0415-2135 0730-1250 1130 - 1330/ 1530 - 2135						
Vadsø	ENVD	RMK: -						
Vardø/Svartnes	ENSS	No detailed OPS HR, AVBL O/R						
Ørland	ENOL	REF: -						
Ørsta-Volda/Hovden	ENOV	AVBL for scheduled flights. Otherwise O/R:						
Ålesund/Vigra	ENAL	REF: WGH (+47) 64 82 69 04 / handling.tos@wideroe.no Aviator (+47) 77 28 04 00 / operations.tos@aviator.eu						
		AVBL for scheduled flights. Otherwise O/R						
		RMK: Aviator (+47) 74 60 20 10 WGH (+47) 64 82 67 10						
		0300 - 1330 / 1430 - 2330		1015 - 1445		0930 - 1300 /		
		0730 - 1230 / 1700 - 2130 NIL 1700 - 2130						
		RMK: -						
		NIL						
		0430 - 2230		0500 - 1000 / 1615		1100 - 2230		
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsto-volda@wideroe.no						
		No detailed OPS HR, AVBL						
		RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu						

AD 3.3 Operational hours

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	No detailed OPS HR, AVBL O/R						
		RMK: AD ADMIN						

## AD 2.3 Operational hours: Security

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0445-2300					1130-1430	0745-2330
Andøya/Andenes	ENAN	RMK:-		0400-1900			0700-1330	1130-2000
Arendal/Gullknapp	ENGK	NIL						
Bardufoss	ENDU	No detailed OPS HR, AVBL for OPR SCHED TFC RMK: O/R outside HR of OPR SCHED TFC to CIV AD ADMIN						
Bergen/Flesland	ENBR				AVBL H24			
Berlevåg	ENBV	NIL						
Bodø	ENBO	RMK: Operations Centre (+47) 67 03 37 00						
Brønnøysund/Brønnøy	ENBN	RMK: AD ADMIN						
Båtsfjord	ENBS	0600 - 1700 / 1900 - 2200					NIL	1400 - 1700
Florø	ENFL	No detailed OPS HR, AVBL O/R						
Førde/Bringeland	ENBL	0430 - 1100 / 1200 - 2000				0630 - 1200		1030 - 1930
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R						
Harstad/Narvik/Evenes	ENEV	NIL						
Hasvik	ENHK	No detailed OPS HR, AVBL O/R						
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R						
Honningsvåg/Valan	ENHV	RMK: 3 HR prior notice to AD ADMIN required for NON-SCHED TFC to INTL destination						
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL by prior arrangement						
Kirkenes/Høybuktno	ENKR	0300 - 1400 / 1700 - 2000				0830 - 1130		0830 - 2200
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0330 - 2100						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	0500 - 1300 / 1500 - 1800 / 2000 - 2230				0500 - 1410		1045 - 2230
Leknes	ENLK	No detailed OPS HR, AVBL O/R						
Mehamn	ENMH	No detailed OPS HR, AVBL O/R						
Mo I Rana/Røssvoll	ENRA	0420 - 2210				0530 - 1330		0900 - 2200
Molde/Årø	ENML	0510 - 2200						
Mosjøen/Kjærstad	ENMS	NIL						
Namsos	ENNM	No detailed OPS HR, AVBL O/R						
Notodden/Tuven	ENNO	No detailed OPS HR, AVBL O/R						
Ny Ålesund/	ENAS	NIL						
Oslo/Gardermoen	ENGM	AVBL H24						
Rygge	ENRY	NIL						
Røros	ENRO	No detailed OPS HR, AVBL O/R						
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL by prior arrangement						
Røst	ENRS	No detailed OPS HR, AVBL O/R						
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R						
Sandefjord/Torp	ENTO	NIL						
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R						
Sogndal/Haukåsen	ENSG	RMK: (+47) 934 10 977						
Stavanger/Sola	ENZV	AVBL H24						
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R						
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*
Svea	ENSA	RMK: See "Fire & Rescue Service" for description of annotation *						
Svolvær/Helle	ENSH	0330-2135			0415-2135	0730-1250		1130 - 1330/ 1530 - 2135
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R						
Tromsø/Langnes	ENTC	0430 - 2300					HO	HO
Trondheim/Værnes	ENVA	RMK: Avinor Security (+47) 67 03 28 00 / Securitas (+47) 941 65 959						
Vadsø	ENVD	0230 - 2400				1000 - 1500		0930 - 2400
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130				NIL		1700 - 2130
Ørland	ENOL	NIL						
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL O/R						
Ålesund/Vigra	ENAL	0400 - 2230						0400 - 2300

## AD 3.3 Operational hours: Security

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	O/R ADMIN						

## AD 2.3 Operational hours: De-icing

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0530-1800 / 2130-2400						1200-1400	0730-2330
		RMK: (+47) 417 06 931 / (+47) 417 06 962							
Andøya/Andenes	ENAN	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Arendal/Gullknapp	ENGG	NIL							
		No detailed OPS HR, AVBL O/R							
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M							
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 RMK: Aviator De-icing 0515 - 2315 (+47) 920 41 009 Widerøe Ground Handling 0530-2300 O/R 2300-0530 (+47) 64 82 85 02							
Berlevåg	ENBV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Bodø	ENBO	HO							
		RMK: Widerøe Ground Handling (+47) 417 06 818							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R							
		RMK: Air Service (+47) 400 03 031 / (+47) 989 01 346							
Båtsfjord	ENBS	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Florø	ENFL	No detailed OPS HR, AVBL O/R							
		RMK: Florø Flyservice (+47) 57 74 67 00							
Fårde/Bringeland	ENBL	0430 - 2200						0630 - 1500	1030 - 2200
		RMK: NIL							
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Harstad/Narvik/Evenes	ENEV	0500 - 2359		0001 - 0120 / 0500 - 2359			0001 - 0220 / 0445 - 1915	0500 - 2310	
		RMK: NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Hønefoss/Eggemoen	ENEG	NIL							
Kirkenes/Høybuktnoen	ENKR	Within ATS OPS, AVBL O/R							
		RMK: Widerøe Ground Handling handling.kkn@wideroe.no							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling							
Kristiansund/Kvernberget	ENKB	NIL							
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 364							
Leknes	ENLK	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 336							
Mehamn	ENMH	NIL							
Mo i Rana/Røssvoll	ENRA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 355							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R							
		RMK: -							
Mosjøen/Kjærstad	ENMS	0520 - 2050						0720 - 1550	0920 - 2050
		RMK: -							
Namsos	ENNM	No detailed OPS HR, AVBL for SCHED TFC and AMB							
Notodden/Tuven	ENNO	NIL							
Ny Ålesund/ Hamnerabben	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24							
		RMK: REF ENGM AD 2.20 para 11							
Rygge	ENRY	NIL							
Røros	ENRO	No detailed OPS HR, AVBL O/R							
		RMK: AVBL O/R Røros Flyservice (+47) 72 41 39 00							
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL O/R							
		RMK: AVBL by prior arrangement							
Røst	ENRS	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandefjord/Torp	ENTO	AVBL 0500 - 2200							
		RMK: REF ENTO AD 2.20							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe (+47) 57 62 82 52							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: SGS (+47) 957 19 657 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 989 01 457							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815	
		RMK: -							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135		0415-2135			0730-1250	1130 - 1330/ 1530 - 2135	
		RMK: -							
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R							
		RMK: -							
Tromsø/Langnes	ENTC	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 64 82 69 04 / handling.tos@wideroe.no AVBL for scheduled flights. Otherwise O/R.							
Trondheim/Værnes	ENVA	RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) Aviator De-icing (+47) 910 02 980							
Vadsø	ENVD	0300 - 1330 / 1430 - 2330						1015 - 1445	0930 - 1300 / 1400 - 2400
		RMK: -							
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130						NIL	1700 - 2130
		RMK: -							
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL H24 O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no							
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 200							

## AD 3.3 Operational hours: De-icing

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	NIL						



## AD 2.3 Operational hours: Resuce and fire fighting services

Revised per AIRAC 26.03.2020

# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).  
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.  
 # Data with a yellow background is updated since last revision.

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Alta	ENAT	CAT 4 CAT 7	Outside published HR CAT 7						0600 - 1200	0900 - 2200
Andøya/Andenes	ENAN	CAT 6 CAT 7	H24 O/R ATC MNM 12 HR prior to ETA							
Arendal/Gullknapp	ENGL		NIL							
Bardufoss	ENDU	CAT 7 CAT 8/9	H24 O/R ATC MNM 24 HR prior to ETA							
Bergen/Flesland	ENBR	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Berlevåg	ENBV	CAT 4	0630 - 2200						0600 - 1330	1030 - 1330
Bodø	ENBO	CAT 7	H24							
Brønnøysund/Brønnøy	ENBN	CAT 4 CAT 5	0530-1940						0930-1540	1130-1940
Båtsfjord	ENBS	CAT 4	0600-2205						NIL	1430-2205
Florø	ENFL	CAT 4	0510 - 2030				0615 - 2030	1225 - 1720	0815 - 0835 / 1235 - 2030	
Førde/Bringeland	ENBL	CAT 4	0500-2230						0645-1530	1100-2200
Hammerfest	ENHF	CAT 4	H24							
Harstad/Narvik/Evenes	ENEV	CAT 7 CAT 9	0500 - 2200						0530 - 1300	0900 - 2230
Hasvik	ENHK	CAT 4	0630-2115						NIL	1330-1530 / 1930-2115
Haugesund/Karmøy	ENHD	CAT 4 CAT 7	Outside published CAT 7 HR of OPR							
Honningsvåg/Valan	ENHV	CAT 4	0435-2215						0545-2300	0700-2330
Hønefoss/Eggemoen	ENEG	CAT 4	O/R							
Kirkenes/Høybuktno	ENKR	CAT 4 CAT 7	Outside published CAT 7 HR of OPR							
Kjeller	ENKJ	CAT 6	O/R for MIL operations							
Kristiansand/Kjevik	ENCN	CAT 4 CAT 7 CAT 8	Outside published CAT 7 HR of OPR							
Kristiansund/Kvernberget	ENKB	CAT 4 CAT 7	0450-2200	0515 - 2220				1200 - 1900 0600 - 1200 / 1900 - 2000	0800 - 2245	
Lakselv/Banak	ENNA	CAT 4 CAT 7 CAT 9	Outside published CAT 7 HR of OPR							
Leknes	ENLK	CAT 4	0415 - 2140						0935 - 1240	0935 - 1230 / 1440 - 2140
Mehamn	ENMH	CAT 4	0320-2315						CLSD	1550-2310
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210						0535 - 1330	0945 - 1040 / 1315 - 2150
Molde/Årø	ENML	CAT 7	0510 - 2200						0530 - 2000	0850 - 2230
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2150						0820 - 1150	1120 - 2150
Namsos	ENNM	CAT 4	0500 - 2100						0500 - 1100	1500 - 2100
Notodden/Tuven	ENNO	CAT 3	O/R							
Ny Ålesund/Hammerabben	ENAS	CAT 3	Within AFIS HR of SER							
Oslo/Gardermoen	ENGM	CAT 9	H24							
Rygge	ENRY	CAT 3	O/R							
Røros	ENRO	CAT 4 CAT 5 CAT 6	For SCHED TFC and charter TFC. Other TFC on 10 MIN prior request							
Rørvik/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130						0700 - 1035	1320 - 2110
Røst	ENRS	CAT 4	0615 - 0815 / 1710 - 1910	0615 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315	
Sandane/Anda	ENSD	CAT 4	0450-2130						0830-1500	1330-2130
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200							
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130						0530 - 1245	1200 - 2200
Sogndal/Haukåsen	ENSG	CAT 4	0500 - 2015						0805 - 1145	1030 - 2020
Stavanger/Sola	ENZV	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Stokmarknes/Skagen	ENSK	CAT 4	0410-1915		0410-2150		0720-2150	1000-1300	1150-2150	
Stord/Sørstokken	ENSO	CAT 4 CAT 5 CAT 6	For SCHED TFC							
Svalbard/Longyear	ENSB	CAT 4 CAT 7	0700-0930/ 1330-1600/ 2200-0000	0700-1100/ 1330-1600	1330-1600	0730-1000/ 1330-1600	0730-0930/ 1330-1430	-	-	
			0000-0100* 0930-1330/ 2200-0000*	0000-0100* 1100-1330	0930-1330	1000-1330	0930-1330/ 2200-0000*	0000-0100*	1130-1330/ 2200-0000*	
		RMK	* Only SEP 2nd, 3rd, 7th, 9th, 14th, and 21st							
Svea	ENSA	CAT 3	AVBL O/R							
Svolvær/Helle	ENSH	CAT 4	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135	
Sørkjosen	ENSR	CAT 4	0445-1945						NIL	1115-1315 /
Tromsø/Langnes	ENTC	CAT 4 CAT 7 CAT 8	2300 - 0500 0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR)							
Trondheim/Værnes	ENVA	CAT 7 CAT 9	H24 O/R ATC MNM 30 MIN prior to ETA							
Vadsø	ENVD	CAT 4	0330 - 2400						1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130						NIL	1630 - 2130
Ørland	ENOL	CAT 6 CAT 9	H24 AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20							
Ørsta-Volda/Hovden	ENOV	CAT 4	0505 - 2240						0545 - 0950 / 1640 - 1710	1145 - 2240
Ålesund/Vigra	ENAL	CAT 4 CAT 7	AVBL O/R outside CAT 7 HRS of OPR							
			0500 - 2230							

## AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045	1345 - 1645