

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0700-1430						-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays						-	-
Arendal/Gullknapp	ENGK	0700-1400 EXC holidays						-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays						-	-
		MIL: H24 via Base/Wing Ops							
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays						-	-
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays						-	-
Bodø	ENBO	0700 - 1430 EXC holidays						-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays						-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays						-	-
Florø	ENFL	NIL							
Førde/Bringeland	ENBL	NIL							
Hammerfest	ENHF	0700 - 1400 EXC holidays						-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays						-	-
Hasvik	ENHK	0700 - 1400 EXC holidays						-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays						-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays						-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays						-	-
Kirkenes/Høybuktmoen	ENKR	0700 - 1430 EXC holidays						-	-
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays						-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays						-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays						-	-
Leknes	ENLK	0700 - 1400 EXC holidays						-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230						0450 - 0700 / 1120 - 1400	1520 - 2230
Mo i Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays						-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0700 - 1400 EXC holidays						-	-
		<i>RMK: post@avinor.no</i>							
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays						-	-
Namsos	ENNM	0700 - 1430 EXC holidays						-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays						-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays						-	-
Oslo/Gardermoen	ENGM	0700 - 1500						-	-
Rygge	ENRY	H24							
Røros	ENRO	0700 - 1400 EXC holidays						-	-
Rørvik/Ryum	ENRM	NIL							
Røst	ENRS	0800 - 1400 EXC holidays						-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays						-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays						-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays						-	-
Sogndal/Haukåsen	ENSG	0800 - 1400						-	-
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays						-	-
		15 SEP - 14 MAY: 0700 - 1445 EXC holidays							
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays						-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays						-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays						-	-
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays						-	-
Sørkjosen	ENSR	0700 - 1430 EXC holidays						-	-
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays						-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays						-	-
Vadsø	ENVD	0700 - 1500 EXC holidays						-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays						-	-
Ørland	ENOL	CIV: 0700 - 1400						-	-
Ørsta-Volda/Hovden	ENOV	0730 - 1430 EXC holidays						-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays						-	-

AD 3.3 Operational hours: AD administration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Værøy	ENVR	0630 - 1100 / 1330 - 1700						0630 - 1100	1330 - 1700

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				NIL			
Arendal/Gullknapp	ENGK				NIL			
Bardufoss	ENDU				NIL			
Bergen/Flesland	ENBR				H24			
Berlevåg	ENBV				NIL			
Bodø	ENBO			AVBL O/R to ATS 90 MIN prior to ETA				
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV			AVBL O/R to ATS 4 HR prior to ETA				
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD			AVBL O/R to ATS 1 HR prior to ETA				
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG			AVBL O/R AD ADMIN				
Kirkenes/Høybuktkmoen	ENKR			AVBL O/R to ATS 1 HR prior to ETA				
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN			AVBL O/R to ATS 1 HR prior to ETA				
Kristiansund/Kvernberget	ENKB			AVBL O/R to ATS 4 HR prior to ETA				
Lakselv/Banak	ENNA	O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48						
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo I Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML				O/R to ATS 3 HR prior to ETA			
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO			O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.				
Ny Ålesund/ Hamnerabben	ENAS				Not required			
Oslo/Gardermoen	ENGM				H24			
Rygge	ENRY				REF AD 2.20			
Røros	ENRO			AVBL 0700 - 1430 O/R to ATS 3 HR prior to ETA		NIL	NIL	
Rørвик/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO			AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice via operator/handling agent, or to customs (+47) 911 15 600 for flights not subject to mandatory handling.				
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				AVBL H24			
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB			All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20				
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC			O/R 90 MIN prior notice via operator / handling agent				
Trondheim/Værnes	ENVA			AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00				
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				NIL			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				AVBL O/R to ATS 2 HR prior to ETA			

AD 3.3 Operational hours: Customs and immigration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				NIL			

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).

In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.

Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				H24			
Arendal/Gullknapp	ENGK				AVBL O/R to ATS			
Bardufoss	ENDU			0530-2200			0530-1440	0850-2230
					Bardufoss MET (+47) 67 03 44 85			
Bergen/Flesland	ENBR				NIL			
Berlevåg	ENBV				NIL			
Bodø	ENBO				H24			
					Bodø MET (+47) 75 53 72 80			
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				NIL			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				NIL			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				NIL			
Kirkenes/Høybuktkmoen	ENKR				NIL			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				NIL			
Kristiansund/Kvernberget	ENKB				NIL			
Lakselv/Banak	ENNA				NIL			
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo I Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML				NIL			
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO				NIL			
Ny Ålesund/ Hamnerabben	ENAS				NIL			
Oslo/Gardermoen	ENGM				NIL			
Rygge	ENRY				NIL			
Røros	ENRO				NIL			
Rørvik/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO				NIL			
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				NIL			
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB			0730 - 1400 EXC holiday			N/A	N/A
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC				NIL			
Trondheim/Værnes	ENVA				NIL			
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				H24			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				NIL			

AD 3.3 Operational hours: MET Office

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR							
					O/R MWO Tromsø TEL (+47) 77 62 13 00			

AD 2.3 Operational hours: ATS					Revised per AIRAC 21.05.2020				
# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway. # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges. # Data with a yellow background is updated since last revision.									
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0540 - 2330					0640 - 1800	0930 - 2330	
		RMK: -							
Andøya/Andenes	ENAN	0415 - 2130					0745 - 1545	1000 - 1300 / 1700 - 2200	
		RMK: Public HOL excluded							
Arendal/Gullknapp	ENGK	0700-1400							
		RMK: -							
Bardufoss	ENDU	0530-2200					0530-1440	0850 - 2230	
		RMK: -							
Bergen/Flesland	ENBR	AVBL H24							
		RMK: -							
Berlevåg	ENBV	0500-2115					NIL	1845 - 2115	
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via ENBD ATCC							
Bodø	ENBO	AVBL H24							
		RMK: -							
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540	1130 - 1940	
		RMK: -							
Båtsfjord	ENBS	0600-2205					NIL	1430 - 2205	
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via ENBD ATCC							
Florø	ENFL	0435 - 2030			0550 - 2030		0755-0835 / 1150-1710	0755 - 0835 / 1225 - 2030	
		RMK: -							
Førde/Bringeland	ENBL	0510-2210					0705 - 1445	1100 - 2200	
		RMK: -							
Hammerfest	ENHF	H24					0000 - 1430	1020 - 2400	
		RMK: -							
Harstad/Narvik/Evenes	ENEV	0510-2400					0530-1240 / 1820-1940	0820-2240	
		RMK: -							
Hasvik	ENHK	0630-2115					NIL	1330-1530 / 1930-2115	
		RMK: HOSP/SAR outside HR of OPS AVBL O/R via ENBD ATCC							
Haugesund/Karmøy	ENHD	0500-2100	0540-2100					0600-2130	0720-2230
		RMK: -							
Honningsvåg/Valan	ENHV	0435-2215					NIL	1700-2215	
		RMK: -							
Hønefoss/Eggemoen	ENEG	No ATS service provided							
		RMK: -							
Kirkenes/Høybuktnoen	ENKR	0330 - 2400					0900 - 1500	0900 - 2400	
		RMK: -							
Kjeller	ENKJ	Not ATS service provided							
		RMK: AD AVBL 0800 - 2200. PPR for all TFC.							
Kristiansand/Kjevik	ENCN	0510 - 2215					0510 - 2110	0510 - 2215	
		RMK: -							
Kristiansund/Kvernberget	ENKB	0450 - 2220	0515 - 2220					0600 - 2000	0800 - 2245
		RMK: -							
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410	1100 - 2230	
		RMK: AVBL O/R H24 for charterflights							
Leknes	ENLK	0415 - 2140					0935 - 1240	0935 - 2140	
		RMK: -							
Mehamn	ENMH	0320-1410 / 1550-2315					CLSD	1550-2315	
		RMK: -							
Mo i Rana/Røssvoll	ENRA	0450 - 2210					0535 - 1355	0910 - 2150	
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0510 - 2230					0530 - 1930	0700 - 2230	
		RMK: -							
Mosjøen/Kjærstad	ENMS	0520 - 2150					0620 - 1450	1120 - 2150	
		RMK: -							
Namsos	ENNM	0500 - 2100					0500 - 1100	1500 - 2100	
		RMK: -							
Notodden/Tuven	ENNO	0600-1800					1030-1600	1330-1800	
		RMK: -							
Ny Ålesund/ Hamnerabben	ENAS	No detailed HR of OPS, AFIS AVBL in accordance with PPR.							
		RMK: Contact Kings Bay Ltd. or Longyear AFIS, REF ENSB							
Oslo/Gardermoen	ENGM	H24							
		RMK: -							
Rygge	ENRY	0700 - 1900			0700 - 2300		0700 - 1900	0800 - 1500	
		RMK: -							
Røros	ENRO	0530 - 1420 /			0530 - 1420 /		-	1300 - 1820	
		RMK: -							
Rørvik/Ryum	ENRM	0515 - 2130					0700 - 1035	1320 - 2110	
		RMK: -							
Røst	ENRS	0615 - 0815 / 1710 - 1910	0615 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315	
		RMK: -							
Sandane/Anda	ENSD	0450-2130					0830-1510	1250-2130	
		RMK: -							
Sandefjord/Torp	ENTO	0500 - 2200							
		RMK: -							
Sandnessjøen/Stokka	ENST	0350 - 2130					0530 - 1300	1120 - 2200	
		RMK: -							
Sogndal/Haukåsen	ENSG	0500 - 2015					0805 - 1145	1030 - 2020	
		RMK: -							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: -							
Stokmarknes/Skagen	ENSK	0410-1915	0410-2150		0720-2150		1000-1300	1150-2150	
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115		0500 - 1915	NIL	1100 - 1815
		RMK: Extend HR of OPS O/R TEL (+47) 926 65 553							
Svalbard/Longyear	ENSB	H24							
		RMK: -							
Svea	ENSA	AFIS AVBL O/R or PPR							
		RMK: -							
Svolvær/Helle	ENSH	0330-2135			0415-2135		0730-1250	1130 - 1330 / 1530 - 2135	
		RMK: -							
Sørkjosen	ENSR	0445-1945					NIL	1115-1315 / 1645-1945	
		RMK: -							
Tromsø/Langnes	ENTC	H24							
		RMK: -							
Trondheim/Værnes	ENVA	H24							
		RMK: -							
Vadsø	ENVD	0330-2400					1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400	
		RMK: -							
Vardø/Svartnes	ENSS	0730-2130					NIL	1700 - 2130	
		RMK: -							
Ørland	ENOL	APP 0800-1430			TWR H24		APP NIL		
		RMK: Outside detailed APP HR, APP service provided by TWR							
Ørsta-Volda/Hovden	ENOV	0505 - 2240					0545 - 0950 / 1640 - 1710	1145 - 2240	
		RMK: HOSP/SAR outside HR of OPS AVBL O/R VIA ENBD ATCC							
Ålesund/Vigra	ENAL	0500-2230							
		RMK: -							
AD 3.3 Operational hours: ATS									
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Værøy	ENVR	FIS AVBL H24 via Bodø ATCC							
		RMK: -							

AD 2.3 Operational hours: Fuel				Revised per AIRAC 21.05.2020					
# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway. # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges. # Data with a yellow background is updated since last revision.									
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	No detailed OPS HR, AVBL O/R							
		RMK: Within HR of SER AIR BP (+47) 917 22 590							
		Outside HR of SER: Air BP OOHs (+971) 5045 30326 / airpoutofhours@bp.com; or							
Andøya/Andenes	ENAN	0630-1430					NIL		NIL
		RMK: For public HOL contact Flo fuel (+47) 458 71 621 / bjojorgensen@mil.no							
Arendal/Gullknapp	ENGG	NIL							
Bardufoss	ENDU	0530-2200					0530-0830		1000-2100
		RMK: Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies							
Bergen/Flesland	ENBR	0400 - 2200					0400 - 2000		0400 - 2200
		RMK: Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433.							
Berlevåg	ENBV	AVBL O/R							
		100LL: H24							
Bodø	ENBO	JET A1: 0330 - 2030					0500 - 1500		0900 - 2100
		RMK: (+47) 75 52 03 79. Surcharge applies outside HR of OPER.							
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540		1130 - 1940
		RMK: -							
Båtsfjord	ENBS	0600 - 2205					NIL		1430 - 2205
		RMK: -							
Florø	ENFL	0510 - 2030			0615 - 2030		1225 - 1720		0815 - 0835 /
		RMK: -							
Førde/Bringeland	ENBL	0500 - 2230					0705 - 1445		1100 - 2200
		RMK: -							
Hammerfest	ENHF	H24							
		RMK: -							
Harstad/Narvik/Evenes	ENEV	0430 - 2100					0430 - 1300		0900 - 2100
		RMK: -							
Hasvik	ENHK	NIL							
Haugesund/Karmøy	ENHD	0545-2300					0545-2300		0700-2330
		AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22							
Honningsvåg/Valan	ENHV	0435-2215					NIL		1700-2215
		RMK: -							
Hønefoss/Eggemoen	ENEG	0600 - 1500					NIL		NIL
		RMK: EXC holidays							
Kirkenes/Høybuktnmoen	ENKR	0315 - 1330 / 1750 - 2000					0855 - 1155		0855 - 1130 / 1800 - 2000
		RMK: Outside HR of OPS: O/R Air BP Norway AS (+47) 78 99 80 30 / Air BP OOHs (+971) 50 453 6032 / RocketRoute							
Kieller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	0430 - 1930					0430 - 1700		0430 - 1930
		RMK: -							
Kristiansund/Kvernberget	ENKB	0500 - 2000					0500 - 1500		1230 - 2000
		RMK: Within HR of OPS Shell (+47) 90 76 68 49							
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410		1100 - 2230
		RMK: Outside HR of OPS O/R (+47) 482 89 103							
Leknes	ENLK	AVBL O/R							
		RMK: -							
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400		1520 - 2230
		RMK: -							
Mo i Rana/Røssvoll	ENRA	0455 - 1215 / 1320 - 2210					0535 - 1330		0945 - 1040 / 1315 - 2150
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0430 - 1600					0430 - 1530		0830 - 1800
		RMK: (+47) 71 24 42 85 / support@ofsn.no							
Mosjøen/Kjærstad	ENMS	0520 - 2150					0820 - 1150		1120 - 2150
		RMK: -							
Namsos	ENNM	0500 - 2100					0500 - 1100		1500 - 2100
		RMK: -							
Notodden/Tuven	ENNO	AVBL H24							
		RMK: Key controlled pump station AVBL. BP card only							
Ny Ålesund/ Hamnerabben	ENAS	No detailed OPS HR, AVBL O/R by prior permission							
		RMK: -							
		100LL AVBL O/R 0500 - 2300					0800 - 1700		1000 - 1900
		RMK: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required							
Oslo/Gardermoen	ENGM	JET A1 AVBL H24							
		RMK: (+47) +64 81 08 08 / dispatch@ofsn.no							
		F34 AVBL H24							
		RMK: MIL OPS (+47) 64 80 33 35 / 131.250 MHZ							
Rygge	ENRY	AVBL O/R H24							
		RMK: WingOps							
Røros	ENRO	0530 - 1420 / 1730 - 1820					0530 - 1420 /		NIL
		RMK: Within HR of OPS Avinor (+47) 911 97 919							
Rørвик/Ryum	ENRM	0515 - 1100 / 1400 - 2130					0700 - 1035		1320 - 2110
		RMK: -							
Røst	ENRS	0615 - 0815 / 1700 - 1900		0615 - 1910 / 0615 - 0815 / 1710 - 1910			0615 - 0815 / 1710 - 1910		0615 - 0815 1115 - 1315
		RMK: -							
Sandane/Anda	ENSD	0510 - 2050					0820 - 1400		1220 - 2050
		RMK: -							
Sandefjord/Torp	ENTO	Fuel truck AVBL in period 30 MIN prior to first SCHED DEP until 30 MIN after last SCHED DEP.							
		RMK: Within HR of OPS: Fuel coordinator (+47) 33 48 63 44							
		Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com							
Sandnessjøen/Stokka	ENST	0430 - 2130					0530 - 1245		1120 - 2200
		RMK: -							
Sogndal/Haukåsen	ENSG	0500-2015					0805-1145		1030-2020
		RMK: -							
Stavanger/Sola	ENZV	0400 - 2100					0700 - 1930		0400 - 2130
		RMK: Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115		0500 - 1915		NIL
		RMK: O/R 2 HR prior notice to ATS							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*		0000-0100* / 0700-1600		0930-1600		0730-1600	
		0730-1430/ 2200-0000*		0730-1430/ 2200-0000*		0730-1430/ 2200-0000*		0730-1430/ 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135			0415-2135			0730-1250	
		RMK: -							
Sørkjosen	ENSR	0445-1945					NIL		1115-1315 /
		RMK: -							
Tromsø/Langnes	ENTC	0500 - 2230					0500 - 1600		0730 - 2300
		RMK: Within HR of OPS Flytanking AS (+47) 77 67 00 25/56, FAX (+47) 77 67 35 28							
Trondheim/Værnes	ENVA	H24							
		RMK: Securitas (+47) 941 65 959							
Vadsø	ENVD	0330-2400					1020 - 1500		0920 - 1310 /
		RMK: -							
Vardø/Svartnes	ENSS	0730-2130					NIL		1700 - 2130
		RMK: -							
Ørland	ENOL	0700 - 1500 EXC holidays					NIL		NIL
		RMK: Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only.							
Ørsta-Volda/Hovden	ENOV	0505 - 2240					0545 - 0950 / 1640 - 1710		1145 - 2240
Ålesund/Vigra	ENAL	0400 - 2230					0400 - 2300		0400 - 2300
		RMK: Outside opening HR O/R prior to closing							
AD 3.3 Operational hours: Fuel		MON	TUE	WED	THU	FRI	SAT	SUN	
AIRPORT	ICAO								
Værøy	ENVR	NIL							

AD 2.3 Operational hours:		Handling			Revised per AIRAC 21.05.2020					
# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time). In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway. # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges. # Data with a yellow background is updated since last revision.										
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN		
Alta	ENAT	No detailed OPS HR, AVBL O/R								
		RMK: (+47) 417 06 956 / (+47) 417 06 955								
Andøya/Andenes	ENAN	0400 - 1900				0700 - 1330		1130 - 2000		
		RMK: -								
Arendal/Gullknapp	ENGK	NIL								
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu 0730-1530 MIL TFC FLO Forsyning Transport (Air Movement & Transportation)								
Bergen/Flesland	ENBR	AVBL during HO RMK: Aviator (+47) 982 98 400 GA Partner (+47) 938 15 000 / ops@gapa.no Widerøe Ground Handling (+47) 64 82 65 02								
Berlevåg	ENBV	NIL								
Bodø	ENBO	AVBL during HO RMK: Widerøe Ground Handling (+47) 417 06 802 Aviator (+47) 948 26 655								
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R								
		RMK: Air Service (+47) 400 03 031								
Båtsfjord	ENBS	0600-2205		NIL		1430 - 2205				
Florø	ENFL	No detailed OPS HR, AVBL O/R								
		RMK: Florø Flyservice (+47) 57 74 67 00								
Førde/Bringeland	ENBL	0430 - 2200		0630 - 1500		1030 - 2200				
		RMK: -								
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R								
Harstad/Narvik/Evenes	ENEV	NIL								
Hasvik	ENHK	No detailed OPS HR, AVBL O/R								
		RMK: -								
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R RMK: Aviator (+47) 400 02 444 / operations.hau@aviator.eu / (+47) 982 98 398 (Duty Manager) Widerøe Ground Handling (+47) 417 06 577 / handling.hau@wideroe.no								
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R								
		RMK: -								
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL O/R								
Kirkenes/Høybuktnmoen	ENKR	AVBL within ATS OPS HR RMK: Widerøe Ground Handling handling.kkn@wideroe.no								
Kjeller	ENKJ	NIL								
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R								
		RMK: Widerøe Ground Handling								
Kristiansund/Kvernberget	ENKB	NIL								
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R								
		RMK: Widerøe Ground Handling (+47) 989 01 364								
Leknes	ENLK	O/R								
		RMK: -								
Mehamn	ENMH	NIL								
Mo I Rana/Røssvoll	ENRA	NIL								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN		
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R RMK: Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no Aviator (+47) 976 65 268 / Operations.MOL@aviator.eu								
Mosjøen/Kjærstad	ENMS	NIL								
		O/R								
Namsos	ENNM	RMK: -								
Notodden/Tuven	ENNO	NIL								
Ny Ålesund/	ENAS	NIL								
Oslo/Gardermoen	ENGM	AVBL H24								
		RMK: -								
Rygge	ENRY	AVBL								
		RMK: -								
Røros	ENRO	No detailed OPS HR, AVBL O/R								
		RMK: AD ADMIN Røros Flyservice (+47) 72 41 39 00								
Rørвик/Ryum	ENRM	AVBL by prior arrangement								
		RMK: -								
Røst	ENRS	NIL								
Sandane/Anda	ENSD	NIL								
Sandefjord/Torp	ENTO	No detailed OPS HR, AVBL								
		RMK: REF ENTO AD 2.20								
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R								
		REF: AD ADMIN								
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R								
		RMK: (+47) 57 62 82 52								
Stavanger/Sola	ENZV	AVBL H24 REF: Widerøe Ground Handling (+47) 64 82 65 02 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu SundtAir (+47) 400 41 010 / svg.handling@sundtair.com								
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R								
		REF: -								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN		
Stord/Sørstokken	ENSO	0500-1815		0500 - 2115		0500 - 1915		CSLD 1100 - 1815		
		REF: -								
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*		
		RMK: See "Fire & Rescue Service" for description of annotation *								
Svea	ENSA	NIL								
Svolvær/Helle	ENSH	0330-2135		0415-2135		0730-1250		1130 - 1330/ 1530 - 2135		
		RMK: -								
Sprkjosjen	ENSR	No detailed OPS HR, AVBL O/R								
		REF: -								
Tromsø/Langnes	ENTC	AVBL for scheduled flights. Otherwise O/R: REF: WGH (+47) 64 82 69 04 / handling.tos@wideroe.no Aviator (+47) 77 28 04 00 / operations.tos@aviator.eu								
Trondheim/Værnes	ENVA	AVBL for scheduled flights. Otherwise O/R RMK: Aviator (+47) 74 60 20 10 WGH (+47) 64 82 67 10								
Vadsø	ENVD	0300 - 1330 / 1430 - 2330				1015 - 1445		0930 - 1300 /		
		RMK: -								
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130				NIL		1700 - 2130		
		RMK: -								
Ørland	ENOL	NIL								
Ørsta-Volda/Hovden	ENOV	0430 - 2230				0500 - 1000 / 1615 - 1700		1100 - 2230		
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no								
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL								
		RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu								
AD 3.3 Operational hours										
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN		
Værøy	ENVR	No detailed OPS HR, AVBL O/R								
		RMK: AD ADMIN								

AD 2.3 Operational hours: Security				Revised per AIRAC 21.05.2020				
# Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).								
In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.								
# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.								
# Data with a yellow background is updated since last revision.								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0445-2300					1130-1430	0745-2330
		RMK: -						
Andøya/Andenes	ENAN	0400-1900					0700-1330	1130-2000
		RMK:-						
Arendal/Gullknapp	ENGK	NIL						
Bardufoss	ENDU	No detailed OPS HR, AVBL for OPR SCHED TFC						
		RMK: O/R outside HR of OPR SCHED TFC to CIV AD ADMIN						
Bergen/Flesland	ENBR	AVBL H24						
		RMK: Avinor Security (+47) 67 03 15 50						
Berlevåg	ENBV	NIL						
Bodø	ENBO	AVBL H24						
		RMK: Operations Centre (+47) 67 03 37 00						
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R						
		RMK: AD ADMIN						
Båtsfjord	ENBS	0600 - 1700 / 1900 - 2200					NIL	1400 - 1700
		RMK: -						
Florø	ENFL	No detailed OPS HR, AVBL O/R						
		RMK:-						
Førde/Bringeland	ENBL	0430 - 1100 / 1200 - 2000					0630 - 1200	1030 - 1930
		RMK: -						
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R						
		RMK: Securitas (+47) 67 03 50 88						
Harstad/Narvik/Evenes	ENEV	NIL						
Hasvik	ENHK	No detailed OPS HR, AVBL O/R						
		RMK: -						
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R						
		RMK: 3 HR prior notice to AD ADMIN required for NON-SCHED TFC to INTL destination						
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R						
		RMK: -						
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL by prior arrangement						
		RMK: -						
Kirkenes/Høybuktnoen	ENKR	0300 - 1400 / 1700 - 2000					0830 - 1130	0830 - 2200
		RMK: -						
Kjeller	ENKJ	NIL						
Kristiansand/Kjevik	ENCN	0330 - 2100						
		RMK: -						
Kristiansund/Kvernberget	ENKB	NIL						
Lakselv/Banak	ENNA	0500 - 1300 / 1500 - 1800 / 2000 - 2230					0500 - 1410	1045 - 2230
		RMK: -						
Leknes	ENLK	No detailed OPS HR, AVBL O/R						
		RMK: -						
Mehamn	ENMH	No detailed OPS HR, AVBL O/R						
		RMK: -						
Mo I Rana/Røssvoll	ENRA	0420 - 2210					0530 - 1330	0900 - 2200
		RMK: -						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	0510 - 2230					0530 - 1930	0700 - 2230
		RMK: -						
Mosjøen/Kjærstad	ENMS	NIL						
Namsos	ENNM	No detailed OPS HR, AVBL O/R						
		RMK: -						
Notodden/Tuven	ENNO	No detailed OPS HR, AVBL O/R						
		RMK: -						
Ny Ålesund/	ENAS	NIL						
Oslo/Gardermoen	ENGM	AVBL H24						
		RMK: -						
Rygge	ENRY	NIL						
Rørøs	ENRO	No detailed OPS HR, AVBL O/R						
		RMK: AD ADMIN						
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL by prior arrangement						
		RMK: -						
Røst	ENRS	No detailed OPS HR, AVBL O/R						
		RMK: -						
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R						
		RMK: -						
Sandefjord/Torp	ENTO	NIL						
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R						
		RMK: AD ADMIN						
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R						
		RMK: (+47) 934 10 977						
Stavanger/Sola	ENZV	AVBL H24						
		RMK: Avinor Security (+47) 952 59 381						
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R						
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815
		0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*
		RMK: See "Fire & Rescue Service" for description of annotation *						
Svea	ENSA	NIL						
Svolvær/Helle	ENSH	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135
		RMK: -						
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R					NIL	O/R
		RMK: -						
Tromsø/Langnes	ENTC	0430 - 2300					HO	HO
		AVBL H24						
Trondheim/Værnes	ENVA	RMK: Avinor Security (+47) 67 03 28 00 / Securitas (+47) 941 65 959						
		0230 - 2400						
Vadsø	ENVD	0230 - 2400					1000 - 1500	0930 - 2400
		RMK: -						
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130					NIL	1700 - 2130
		RMK: -						
Ørland	ENOL	NIL						
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL O/R						
		RMK: Securitas Transport Aviation Security AS (+47) 22 57 73 08 / lin.marita.sande@securitas.no						
Ålesund/Vigra	ENAL	0400 - 2230						0400 - 2300
		RMK: -						
AD 3.3 Operational hours: Security								
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Væøy	ENVR	O/R ADMIN						

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0530-1800 / 2130-2400						1200-1400	0730-2330
		RMK: (+47) 417 06 931 / (+47) 417 06 962							
Andøya/Andenes	ENAN	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Arendal/Gullknapp	ENGG	NIL							
		No detailed OPS HR, AVBL O/R							
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M							
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 01 MAY - 30 SEP AVBL O/R de-ice operator							
		RMK: Aviator De-icing 0515 - 2315 (+47) 920 41 009 Widerøe Ground Handling 0530-2300 (O/R 2300-0530 (+47) 64 82 85 02)							
Berlevåg	ENBV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Bodø	ENBO	HO							
		RMK: Widerøe Ground Handling (+47) 417 06 818							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R							
		RMK: Air Service (+47) 400 03 031 / (+47) 989 01 346							
Båtsfjord	ENBS	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Florø	ENFL	No detailed OPS HR, AVBL O/R							
		RMK: Florø Flyservice (+47) 57 74 67 00							
Førde/Bringeland	ENBL			0430 - 2200			0630 - 1500	1030 - 2200	
		RMK: NIL							
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Harstad/Narvik/Evenes	ENEV	0500 - 2359		0001 - 0120 / 0500 - 2359			0001 - 0220 / 0445 - 1915	0500 - 2310	
		RMK: NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Hønefoss/Eggemoen	ENEG	NIL							
Kirkenes/Høybuktnoen	ENKR	Within ATS OPS, AVBL O/R							
		RMK: Widerøe Ground Handling handling.kkn@wideroe.no							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling							
Kristiansund/Kvernberget	ENKB	NIL							
		No detailed OPS HR, AVBL O/R							
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 364							
Leknes	ENLK	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 336							
Mehamn	ENMH	NIL							
Mo i Rana/Røssvoll	ENRA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 355							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no							
Mosjøen/Kjærstad	ENMS			0520 - 2050			0720 - 1550	0920 - 2050	
		RMK: -							
Namsos	ENNM	No detailed OPS HR, AVBL for SCHED TFC and AMB							
Notodden/Tuven	ENNO	NIL							
Ny Ålesund/Hammerabben	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24							
		RMK: REF ENGM AD 2.20 para 11							
Rygge	ENRY	NIL							
Røros	ENRO	No detailed OPS HR, AVBL O/R							
		RMK: AVBL O/R Røros Flyservice (+47) 72 41 39 00							
Rørвик/Ryum	ENRM	No detailed OPS HR, AVBL O/R							
		RMK: AVBL by prior arrangement							
Røst	ENRS	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandefjord/Torp	ENTO	AVBL 0500 - 2200							
		RMK: REF ENTO AD 2.20							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sogndal/Haukøsen	ENSG	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe (+47) 57 62 82 52							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: SGS (+47) 957 19 657 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 989 01 457							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO		0500-1815		0500 - 2115	0500 - 1915	NIL	1100 - 1815	
		RMK: -							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH		0330-2135		0415-2135		0730-1250	1130 - 1330/ 1530 - 2135	
		RMK: -							
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R						NIL	O/R
		RMK: -							
Tromsø/Langnes	ENTC	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 64 82 69 04 / handling.tos@wideroe.no AVBL for scheduled flights. Otherwise O/R.							
Trondheim/Værnes	ENVA	RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) Aviator De-icing (+47) 910 02 980							
Vadsø	ENVD		0300 - 1330 / 1430 - 2330				1015 - 1445	0930 - 1300 / 1400 - 2400	
		RMK: -							
Vardø/Svartnes	ENSS		0730 - 1230 / 1700 - 2130				NIL	1700 - 2130	
		RMK: -							
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL H24 O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no							
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 200							

AD 3.3 Operational hours: De-icing

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	NIL						

Norwegian daylight saving time is UTC + 2 hours. All times in AIP Norway are given in UTC related to Norwegian standard time (winter time).
 In order to obtain UTC when daylight saving time is in force, 1 hour must be subtracted from all times given in the AIP Norway.
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including dscription of any surcharges.
 # Data with a yellow background is updated since last revision.

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Alta	ENAT	CAT 4	Outside published HR CAT 7							
		CAT 6	0600 - 2200						0600-1200	0900-2200
Andøya/Andenes	ENAN	CAT 7	H24							
		CAT 7	O/R ATC MNM 12 HR prior to ETA							
Arendal/Gullknapp	ENGK		NIL							
Bardufoss	ENDU	CAT 7	H24							
		CAT 8/9	O/R ATC MNM 24 HR prior to ETA							
Bergen/Flesland	ENBR	CAT 7	H24							
		CAT 9	O/R ATC MNM 30 MIN prior to ETA							
Berlevåg	ENBV	CAT 4	0630 - 2200						0600 - 1330	1030 - 1330
Bodø	ENBO	CAT 7	H24							
		CAT 9	AVBL O/R 24 HR prior ETA							
Brønnøysund/Brønnøy	ENBN	CAT 4	0530-1940						0930-1540	1130-1940
		CAT 5	For SKED DH8C TFC only							
Båtsfjord	ENBS	CAT 4	0600-2205						NIL	1430-2205
Florø	ENFL	CAT 4	0510 - 2030				0615 - 2030	1225 - 1720	0815 - 0835 / 1235 - 2030	
Førde/Bringeland	ENBL	CAT 4	0500-2230						0645-1530	1100-2200
Hammerfest	ENHF	CAT 4	H24							
Harstad/Narvik/Evenes	ENEV	CAT 7	0500 - 2200						0530 - 1300	0900 - 2230
		CAT 9	O/R ATC							
Hasvik	ENHK	CAT 4	0630-2115						NIL	1330-1530 / 1930-2115
Haugesund/Karmøy	ENHD	CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0545-2300						0545-2300	0700-2330
Honningsvåg/Valan	ENHV	CAT 4	0435-2215						NIL	1700-2215
Hønefoss/Eggemoen	ENEG	CAT 4	O/R							
Kirkenes/Høybuktnmoen	ENKR	CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0600-2200						0800-1500	0800-2200
Kjeller	ENKJ	CAT 6	O/R for MIL operations							
		CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0500-2205							0500-2245
		CAT 8	Outside published CAT 7 HR of OPR, O/R ATC MNM 1 HR prior to ETA							
		CAT 8	O/R ATC MNM 1 HR prior to ETA							
Kristiansund/Kvernberget	ENKB	CAT 4						1200 - 1900		
		CAT 7	0450-2200			0515 - 2220		0600-1200 / 1900 - 2000	0800 - 2245	
		CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0500 - 2230			0500 - 2300	1000 - 1645	1030 - 2300		
		CAT 9	Outside published CAT 7 HR of OPR, O/R ATC prior to ETA							
		CAT 9	O/R ATC MNM 48 HR prior to ETA							
Leknes	ENLK	CAT 4	0415 - 2140						0935 - 1240	0935 - 1230 / 1440 - 2140
Mehamn	ENMH	CAT 4	0320-2315						CLSD	1550-2310
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210						0535 - 1330	0945 - 1040 / 1315 - 2150
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Molde/Årø	ENML	CAT 7	0510 - 2230						0530 - 1930	0700 - 2230
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2150						0820 - 1150	1120 - 2150
Namsos	ENNM	CAT 4	0500 - 2100						0500 - 1100	1500 - 2100
Notodden/Tuven	ENNO	CAT 3	O/R							
Ny Ålesund/Hammerabben	ENAS	CAT 3	Within AFIS HR of SER							
Oslo/Gardermoen	ENGM	CAT 9	H24							
Rygge	ENRY	CAT 3	O/R							
		CAT 4	For SCHED TFC and charter TFC. Other TFC on 10 MIN prior request							
		CAT 5								
		CAT 6	AVBL O/R ATS MNM 48 HR prior to ETA							
Rørвик/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130						0700 - 1035	1320 - 2110
Røst	ENRS	CAT4	0615 - 0815 / 1710 - 1910		0615 - 1910		0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315	
Sandane/Anda	ENSD	CAT 4	0450-2130						0830-1500	1330-2130
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200							
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130						0530 - 1245	1200 - 2200
Sogndal/Haukåsen	ENSG	CAT 4	0500 - 2015						0805 - 1145	1030 - 2020
		CAT 7	H24							
		CAT 9	O/R ATC MNM 30 MIN prior to ETA							
Stokmarknes/Skagen	ENSK	CAT 4	0410-1915		0410-2150	0720-2150		1000-1300	1150-2150	
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
		CAT 4	For SCHED TFC							
		CAT 5								
		CAT 6	AVBL O/R ADMIN MNM 48 HR prior to ETA							
		CAT 4	0700-0930/ 1330-1600/ 2200-0000	0700-1100/ 1330-1600	1330-1600	0730-1000/ 1330-1600	0730-0930/ 1330-1430	-	-	
Svalbard/Longyear	ENSB	CAT 7	0000-0100*/ 0930-1330/ 2200-0000*	0000-0100*/ 1100-1330	0930-1330	1000-1330	0930-1330/ 2200-0000*	0000-0100*	1130-1330/ 2200-0000*	
		RMK	* Only SEP 2nd, 3rd, 7th, 9th, 14th. and 21st							
Svea	ENSA	CAT 3	AVBL O/R							
Svolvær/Helle	ENSH	CAT 4	0330-2135				0415-2135	0730-1250	1130 - 1330 / 1530 - 2135	
Sørkjosen	ENSR	CAT 4	0445-1945						NIL	1115-1315 /
		CAT 4	2300 - 0500							
Tromsø/Langnes	ENTC	CAT 7	0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR)							
		CAT 8	AVBL O/R H24							
		CAT 7	H24							
		CAT 9	O/R ATC MNM 30 MIN prior to ETA							
Vadsø	ENVD	CAT 4	0330 - 2400						1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130						NIL	1630 - 2130
		CAT 6	H24							
		CAT 9	AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20							
Ørsta-Volda/Hovden	ENOV	CAT 4	0505 - 2240						0545 - 0950 / 1640 - 1710	1145 - 2240
Ålesund/Vigra	ENAL	CAT 4	AVBL O/R outside CAT 7 HRS of OPR							
		CAT 7	0500 - 2230							

AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045	1345 - 1645