

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT	0700-1430					-	-
Andøya/Andenes	ENAN	0630-1430 EXC holidays					-	-
Arendal/Gullknapp	ENGK	0700-1400 EXC holidays					-	-
Bardufoss	ENDU	CIV: 0700-1500 EXC holidays					-	-
		MIL: H24 via Base/Wing Ops						
Bergen/Flesland	ENBR	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
Berlevåg	ENBV	15 MAY - 15 SEP: 0700-1400 EXC holidays					-	-
Bodø	ENBO	0700 - 1430 EXC holidays					-	-
Brønnøysund/Brønnøy	ENBN	0700 - 1400 EXC holidays					-	-
Båtsfjord	ENBS	0700 - 1430 EXC holidays					-	-
Florø	ENFL	NIL					-	-
Førde/Bringeland	ENBL	NIL					-	-
Hammerfest	ENHF	0700 - 1400 EXC holidays					-	-
Harstad/Narvik/Evenes	ENEV	15 MAY - 15 SEP: 0700 - 1400 EXC holidays					-	-
Hasvik	ENHK	0700 - 1400 EXC holidays					-	-
Haugesund/Karmøy	ENHD	0900 - 1200 EXC holidays					-	-
Honningsvåg/Valan	ENHV	0700 - 1500 EXC holidays					-	-
Hønefoss/Eggemoen	ENEG	0600 - 1500 EXC holidays					-	-
Kirkenes/Høybuktnoen	ENKR	0700 - 1430 EXC holidays					-	-
Kjeller	ENKJ	NIL					-	-
Kristiansand/Kjevik	ENCN	0700 - 1400 EXC holidays					-	-
Kristiansund/Kvernberget	ENKB	0700 - 1400 EXC holidays					-	-
Lakselv/Banak	ENNA	0700 - 1430 EXC holidays					-	-
Leknes	ENLK	0700 - 1400 EXC holidays					-	-
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400	1520 - 2230
Mo I Rana/Røssvoll	ENRA	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML	0700 - 1400 EXC holidays					-	-
		RMK: post@avinor.no						
Mosjøen/Kjærstad	ENMS	0700 - 1400 EXC holidays					-	-
Namsos	ENNM	0700 - 1430 EXC holidays					-	-
Notodden/Tuven	ENNO	0800 - 1500 EXC holidays					-	-
Ny Ålesund/ Hamnerabben	ENAS	0700 - 1100 / 1200 - 1530 EXC holidays					-	-
Oslo/Gardermoen	ENGM	0700 - 1500					-	-
Rygge	ENRY	H24					-	-
Røros	ENRO	0700 - 1400 EXC holidays					-	-
Rørvik/Ryum	ENRM	NIL					-	-
Røst	ENRS	0800 - 1400 EXC holidays					-	-
Sandane/Anda	ENSD	0730 - 1500 EXC holidays					-	-
Sandefjord/Torp	ENTO	0700 - 1400 EXC holidays					-	-
Sandnessjøen/Stokka	ENST	0700 - 1400 EXC holidays					-	-
Sogndal/Haukåsen	ENSG	0800 - 1400					-	-
Stavanger/Sola	ENZV	15 MAY - 14 SEP: 0700 - 1400 EXC holidays 15 SEP - 14 MAY: 0700 - 1445 EXC holidays					-	-
Stokmarknes/Skagen	ENSK	0700 - 1400 EXC holidays					-	-
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO	0700 - 1400 EXC holidays					-	-
Svalbard/Longyear	ENSB	0700 - 1430 EXC holidays					-	-
Svea	ENSA	NIL					-	-
Svolvær/Helle	ENSH	0700 - 1400 EXC holidays					-	-
Sørkjosen	ENSR	0700 - 1430 EXC holidays					-	-
Tromsø/Langnes	ENTC	0800 - 1530 EXC holidays					-	-
Trondheim/Værnes	ENVA	0700 - 1430 EXC holidays					-	-
Vadsø	ENVD	0700 - 1500 EXC holidays					-	-
Vardø/Svartnes	ENSS	0730 - 1430 EXC holidays					-	-
Ørland	ENOL	CIV: 0700 - 1400					-	-
Ørsta-Volda/Hovden	ENOV	0730 - 1430 EXC holidays					-	-
Ålesund/Vigra	ENAL	0700 - 1530 EXC holidays					-	-

## AD 3.3 Operational hours: AD administration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	0630 - 1100 / 1330 - 1700					0630 - 1100	1330 - 1700

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				NIL			
Arendal/Gullknapp	ENGK				NIL			
Bardufoss	ENDU				NIL			
Bergen/Flesland	ENBR				H24			
Berlevåg	ENBV				NIL			
Bodø	ENBO			AVBL O/R to ATS 90 MIN prior to ETA				
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV			AVBL O/R to ATS 4 HR prior to ETA				
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD			AVBL O/R to ATS 1 HR prior to ETA				
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG			AVBL O/R AD ADMIN				
Kirkenes/Høybukta	ENKR			AVBL O/R to ATS 1 HR prior to ETA				
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN			AVBL O/R to ATS 1 HR prior to ETA				
Kristiansund/Kvernberget	ENKB			AVBL O/R to ATS 4 HR prior to ETA				
Lakselv/Banak	ENNA	O/R AD ADMIN or Customs HQ (+47) 22 86 03 12. ATS shall be notified of INTL ARR not later than 48						
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo I Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML			O/R to ATS 3 HR prior to ETA				
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO			O/R to ATS 24 HR prior to ETA for INTL flights approved by Norwegian CAA.				
Ny Ålesund/ Hamnerabben	ENAS			Not required				
Oslo/Gardermoen	ENGM				H24			
Rygge	ENRY				REF AD 2.20			
Røros	ENRO			AVBL 0700 - 1430 O/R to ATS 3 HR prior to ETA			NIL	NIL
Rørvik/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO			AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice via operator/handling agent, or to customs (+47) 911 15 600 for flights not subject to mandatory handling.				
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				AVBL H24			
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB			All TFC to, from and within Svalbard are subject to PPR, REF ENSB AD 2.20				
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC			O/R 90 MIN prior notice via operator / handling agent				
Trondheim/Værnes	ENVA			AVBL for scheduled INTL flights. Otherwise O/R 90 MIN prior notice (+47) 67 03 28 00				
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				NIL			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL			AVBL O/R to ATS 2 HR prior to ETA				

## AD 3.3 Operational hours: Customs and immigration

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				NIL			

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Alta	ENAT				NIL			
Andøya/Andenes	ENAN				H24			
Arendal/Gullknapp	ENBK				AVBL O/R to ATS			
Bardufoss	ENDU			0530-2200			0530-1440	0850-2230
				Bardufoss MET (+47) 67 03 44 85				
Bergen/Flesland	ENBR				NIL			
Berlevåg	ENBV				NIL			
Bodø	ENBO				H24			
				Bodø MET (+47) 75 53 72 80				
Brønnøysund/Brønnøy	ENBN				NIL			
Båtsfjord	ENBS				NIL			
Florø	ENFL				NIL			
Førde/Bringeland	ENBL				NIL			
Hammerfest	ENHF				NIL			
Harstad/Narvik/Evenes	ENEV				NIL			
Hasvik	ENHK				NIL			
Haugesund/Karmøy	ENHD				NIL			
Honningsvåg/Valan	ENHV				NIL			
Hønefoss/Eggemoen	ENEG				NIL			
Kirkenes/Høybuktkmoen	ENKR				NIL			
Kjeller	ENKJ				NIL			
Kristiansand/Kjevik	ENCN				NIL			
Kristiansund/Kvernberget	ENKB				NIL			
Lakselv/Banak	ENNA				NIL			
Leknes	ENLK				NIL			
Mehamn	ENMH				NIL			
Mo i Rana/Røssvoll	ENRA				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Molde/Årø	ENML				NIL			
Mosjøen/Kjærstad	ENMS				NIL			
Namsos	ENNM				NIL			
Notodden/Tuven	ENNO				NIL			
Ny Ålesund/ Hamnerabben	ENAS				NIL			
Oslo/Gardermoen	ENGM				NIL			
Rygge	ENRY				NIL			
Røros	ENRO				NIL			
Rørvik/Ryum	ENRM				NIL			
Røst	ENRS				NIL			
Sandane/Anda	ENSD				NIL			
Sandefjord/Torp	ENTO				NIL			
Sandnessjøen/Stokka	ENST				NIL			
Sogndal/Haukåsen	ENSG				NIL			
Stavanger/Sola	ENZV				NIL			
Stokmarknes/Skagen	ENSK				NIL			
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Stord/Sørstokken	ENSO				NIL			
Svalbard/Longyear	ENSB			0730 - 1400 EXC holiday			N/A	N/A
Svea	ENSA				NIL			
Svolvær/Helle	ENSH				NIL			
Sørkjosen	ENSR				NIL			
Tromsø/Langnes	ENTC				NIL			
Trondheim/Værnes	ENVA				NIL			
Vadsø	ENVD				NIL			
Vardø/Svartnes	ENSS				NIL			
Ørland	ENOL				H24			
Ørsta-Volda/Hovden	ENOV				NIL			
Ålesund/Vigra	ENAL				NIL			

## AD 3.3 Operational hours: MET Office

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR				O/R MWO Tromsø TEL (+47) 77 62 13 00			

**AD 2.3 Operational hours: ATS** **Revised per AIRAC 18.06.2020**

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0540 - 2330					0640 - 1800		0930 - 2330
		RMK: -							
Andøya/Andenes	ENAN	0415 - 2130					0745 - 1545		1000 - 1300 / 1700 - 2200
		RMK: Public HQL excluded							
Arendal/Gullknapp	ENBK	0700-1400							
		RMK: -							
Bardufoss	ENDU	0530-2200					0530-1440		0850 - 2230
		RMK: -							
Bergen/Flesland	ENBR	AVBL H24							
		RMK: -							
Berlevåg	ENBV	0500-2115					NIL		1845 - 2115
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via ENBD ATCC							
Bodø	ENBO	AVBL H24							
		RMK: -							
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540		1130 - 1940
		RMK: -							
Båtsfjord	ENBS	0600-2205					NIL		1430 - 2205
		RMK: HOSP/SAR outside HR OF OPS AVBL O/R 40 MIN prior notice via ENBD ATCC							
Florø	ENFL	0400 - 2130					0830 - 0915 / 1530 - 1600		0650 - 0730 / 1530 - 2130
		RMK: -							
Førde/Bringeland	ENBL	0510-2210					0705 - 1445		1100 - 2200
		RMK: -							
Hammerfest	ENHF	H24					0000 - 1430		1020 - 2400
		RMK: -							
Harstad/Narvik/Evenes	ENEV	0510-2400					0530-1240 / 1820-1940		0820-2240
		RMK: -							
Hasvik	ENHK	0630-2115					NIL		1330-1530 / 1930-2115
		RMK: HOSP/SAR outside HR of OPS AVBL O/R via ENBD ATCC							
Haugesund/Karmøy	ENHD	0500-2100		0540-2100			0600-2130		0720-2230
		RMK: -							
Honningsvåg/Valan	ENHV	0435-2215					NIL		1700-2215
		RMK: -							
Hønefoss/Eggemoen	ENEG	No ATS service provided							
		RMK: -							
Kirkenes/Høybuktnmoen	ENKR	0330 - 2400					0900 - 1500		0900 - 2400
		RMK: -							
Kjeller	ENKJ	Not ATS service provided							
		RMK: AD AVBL 0800 - 2200. PPR for all TFC.							
Kristiansand/Kjevik	ENCN	0510 - 2215					0510 - 2110		0510 - 2215
		RMK: -							
Kristiansund/Kvernberget	ENKB	0515 - 2145					0800 - 1300		1030 - 2000
		RMK: -							
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410		1100 - 2230
		RMK: AVBL O/R H24 for charterflights							
Leknes	ENLK	0415 - 2140					0935 - 1240		0935 - 2140
		RMK: -							
Mehamn	ENMH	0320-1410 / 1550-2315					CLSD		1550-2315
		RMK: -							
Mo i Rana/Røssvoll	ENRA	0450 - 2210					0535 - 1355		0910 - 2150
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0510 - 2230					0530 - 1930		0700 - 2230
		RMK: -							
Mosjøen/Kjærstad	ENMS	0520 - 2150					0620 - 1450		1120 - 2150
		RMK: -							
Namsos	ENNM	0500 - 2100					0500 - 1100		1500 - 2100
		RMK: -							
Notodden/Tuven	ENNO	0600-1800					1030-1600		1330-1800
		RMK: -							
Ny Ålesund/ Hamnerabben	ENAS	No detailed HR of OPS, AFIS AVBL in accordance with PPR.							
		RMK: Contact Kings Bay Ltd. or Longyear AFIS, REF ENSB							
Oslo/Gardermoen	ENGM	H24							
		RMK: -							
Rygge	ENRY	0700 - 1900		0700 - 2300			0700 - 1900		0800 - 1500
		RMK: -							
Røros	ENRO	0530 - 1420 /				0530 - 1420 /		-	1300 - 1820
		RMK: -							
Rørвик/Ryum	ENRM	0515 - 2130					0700 - 1035		1320 - 2110
		RMK: -							
Røst	ENRS	0615 - 0815 / 1710 - 1910		0615 - 1910			0615 - 0815 / 1710 - 1910		0615 - 0815
		RMK: -							
Sandane/Anda	ENSD	0350 - 0900 / 1400 - 2030				0350 - 0900 / 1400 - 2100		0720 - 1050	
		RMK: -							
Sandefjord/Torp	ENTO	0500 - 2200							
		RMK: -							
Sandnessjøen/Stokka	ENST	0350 - 2130					0530 - 1300		1120 - 2200
		RMK: -							
Sogndal/Haukåsen	ENSG	0500 - 2015					0805 - 1145		1030 - 2020
		RMK: -							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: -							
Stokmarknes/Skagen	ENSK	0410-1915		0410-2150		0720-2150		1000-1300	
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115		0500 - 1915		NIL
		RMK: Extend HR of OPS O/R TEL (+47) 926 65 553							
Svalbard/Longyear	ENSB	H24							
		RMK: -							
Svea	ENSA	AFIS AVBL O/R or PPR							
		RMK: -							
Svolvær/Helle	ENSH	0330-2135			0415-2135			0730-1250	
		RMK: -							
Sørkjosen	ENSR	0445-1945					NIL		1115-1315 / 1645-1945
		RMK: -							
Tromsø/Langnes	ENTC	H24							
		RMK: -							
Trondheim/Værnes	ENVA	H24							
		RMK: -							
Vadsø	ENVD	0330-2400					1020 - 1500		0920 - 1310 / 1510 - 2045 / 2225 - 2400
		RMK: -							
Vardø/Svartnes	ENSS	0730-2130					NIL		1700 - 2130
		RMK: -							
Ørland	ENOL	APP 0800-1430					TWR H24		
		RMK: Outside detailed APP HR, APP service provided by TWR							
Ørsta-Volda/Hovden	ENOV	0505 - 2240					0545 - 0950 / 1640 - 1710		1145 - 2240
		RMK: HOSP/SAR outside HR of OPS AVBL O/R VIA ENBD ATCC							
Ålesund/Vigra	ENAL	0500-2230							
		RMK: -							

**AD 3.3 Operational hours: ATS**

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	FIS AVBL H24 via Bodø ATCC						
		RMK: -						

AD 2.3 Operational hours:		Fuel			Revised per AIRAC 21.05.2020				
# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2. # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges. # Data with a yellow background is updated since last revision.									
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	No detailed OPS HR, AVBL O/R							
		RMK: Within HR of SER AIR BP (+47) 917 22 590 Outside HR of SER: Air BP OOHs (+971) 5045 30326 / airbpoutofhours@bp.com; or							
Andøya/Andenes	ENAN	0630-1430				NIL		NIL	
		RMK: For public HOL contact Flo fuel (+47) 458 71 621 / bjojorgensen@mil.no							
Arendal/Gullknapp	ENGG	NIL							
Bardufoss	ENDU	0530-2200					0530-0830		1000-2100
		RMK: Outside these HR contact Air BP (+47) 458 72 157. Surcharge applies							
Bergen/Flesland	ENBR	0400 - 2200					0400 - 2000		0400 - 2200
		RMK: Outside these HR O/R Flytanking AS (+47) 55 92 64 64 / (+47) 414 17 433.							
Berlevåg	ENBV	AVBL O/R							
		100LL: H24							
Bodø	ENBO	JET A1: 0330 - 2030					0500 - 1500		0900 - 2100
		RMK: (+47) 75 52 03 79. Surcharge applies outside HR of OPER.							
Brønnøysund/Brønnøy	ENBN	0530 - 1940					0930 - 1540		1130 - 1940
		RMK: -							
Båtsfjord	ENBS	0600 - 2205					NIL		1430 - 2205
		RMK: -							
Florø	ENFL	0510 - 2030			0615 - 2030		1225 - 1720		0815 - 0835 /
		RMK: -							
Førde/Bringeland	ENBL	0500 - 2230					0705 - 1445		1100 - 2200
		RMK: -							
Hammerfest	ENHF	H24							
		RMK: -							
Harstad/Narvik/Evenes	ENEV	0430 - 2100					0430 - 1300		0900 - 2100
		RMK: -							
Hasvik	ENHK	NIL							
Haugesund/Karmøy	ENHD	0545-2300					0545-2300		0700-2330
		AVBL OR Andersen Airport Service (+47) 52 84 04 70 / FAX (+47) 53 84 04 22							
Honningsvåg/Valan	ENHV	0435-2215					NIL		1700-2215
		RMK: -							
Hønefoss/Eggemoen	ENEG	0600 - 1500					NIL		NIL
		RMK: EXC holidays							
Kirkenes/Høybuktno	ENKR	0315 - 1330 / 1750 - 2000					0855 - 1155		0855 - 1130 / 1800 - 2000
		RMK: Outside HR of OPS: O/R Air BP Norway AS (+47) 78 99 80 30 / Air BP OOHs (+971) 50 453 6032 / RocketRoute							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	0430 - 1930					0430 - 1700		0430 - 1930
		RMK: -							
Kristiansund/Kvernberget	ENKB	0500 - 1900					0530 - 0930		0730 - 1400 / 1700 - 2000
		RMK: Within HR of OPS Shell (+47) 90 76 68 49							
Lakselv/Banak	ENNA	0500 - 2230					0500 - 1410		1100 - 2230
		RMK: Outside HR of OPS O/R (+47) 482 89 103							
Leknes	ENLK	AVBL O/R							
		RMK: -							
Mehamn	ENMH	0350 - 1410 / 1530 - 2230					0450 - 0700 / 1120 - 1400		1520 - 2230
		RMK: -							
Mo i Rana/Røssvoll	ENRA	0455 - 1215 / 1320 - 2210					0535 - 1330		0945 - 1040 / 1315 - 2150
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0430 - 1600					0430 - 1530		0830 - 1800
		RMK: (+47) 71 24 42 85 / support@ofsn.no							
Mosjøen/Kjærstad	ENMS	0520 - 2150					0820 - 1150		1120 - 2150
		RMK: -							
Namsos	ENNM	0500 - 2100					0500 - 1100		1500 - 2100
		RMK: -							
Notodden/Tuven	ENNO	AVBL H24							
		RMK: Key controlled pump station AVBL. BP card only							
Ny Ålesund/ Hamnerabben	ENAS	No detailed OPS HR, AVBL O/R by prior permission							
		RMK: -							
		100LL AVBL O/R 0500 - 2300					0800 - 1700		1000 - 1900
		RMK: Within HR of OPS 1 HR prior notice to Sundt Air Handling (+47) 64 82 02 00 required							
Oslo/Gardermoen	ENGM	JET A1 AVBL H24							
		RMK: (+47) +64 81 08 08 / dispatch@gfs.no							
		F34 AVBL H24							
		RMK: MIL OPS (+47) 64 80 33 35 / 131.250 MHZ							
Rygge	ENRY	AVBL O/R H24							
		RMK: WingOps							
Røros	ENRO	0530 - 1420 / 1730 - 1820					0530 - 1420 /		NIL
		RMK: Within HR of OPS Avinor (+47) 911 97 919							
Rørvik/Ryum	ENRM	0515 - 1100 / 1400 - 2130					0700 - 1035		1320 - 2110
		RMK: -							
Røst	ENRS	0615 - 0815 / 1700 - 1900		0615 - 1910 / 0615 - 0815 / 1710 - 1910			0615 - 0815 / 1710 - 1910		0615 - 0815
		RMK: -							
Sandane/Anda	ENSD	0350 - 0900 / 1400 - 2030					0350 - 0900 / 1400 - 2100		0720 - 1050
		RMK: -							
Sandefjord/Torp	ENTO	Fuel truck AVBL in period 30 MIN prior to first SCHED DEP until 30 MIN after last SCHED DEP.							
		RMK: Within HR of OPS: Fuel coordinator (+47) 33 48 63 44							
		Outside HR of OPS: Fuel coordinator (+47) 905 71 097 / (+47) 907 32 943 / post@torpflytank.com							
Sandnessjøen/Stokka	ENST	0430 - 2130					0530 - 1245		1120 - 2200
		RMK: -							
Sogndal/Haukåsen	ENSG	0500-2015					0805-1145		1030-2020
		RMK: -							
Stavanger/Sola	ENZV	0400 - 2100					0700 - 1930		0400 - 2130
		RMK: Within HR of OPS (+47) 51 64 79 99 / (+47) 905 66 519							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815					0500 - 2115		0500 - 1915
		RMK: O/R 2 HR prior notice to ATIS							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*		0000-0100* / 0700-1600		0930-1600		0730-1600	
		0730-1430/ 2200-0000*		0000-0100		1130-1330 / 2200-0000*			
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135					0415-2135		0730-1250
		RMK: -							
Sørkjosen	ENSR	0445-1945					NIL		1115-1315 /
		RMK: -							
Tromsø/Langnes	ENTC	0500 - 2230					0500 - 1600		0730 - 2300
		RMK: Within HR of OPS Flytanking AS (+47) 77 67 00 25/56, FAX (+47) 77 67 35 28							
Trondheim/Værnes	ENVA	H24							
		RMK: Securitas (+47) 941 65 959							
Vadsø	ENVD	0330-2400					1020 - 1500		0920 - 1310 /
		RMK: -							
Vardø/Svartnes	ENSS	0730-2130					NIL		1700 - 2130
		RMK: -							
Ørland	ENOL	0700 - 1500 EXC holidays					NIL		NIL
		RMK: Outside HR of OPS, O/R (+47) 72 51 24 83 / (+47) 458 74 833. For CIV, payment by Air BP card only.							
Ørsta-Volda/Hovden	ENOV	0505 - 2240					0545 - 0950 / 1640 - 1710		1145 - 2240
		RMK: HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA ENBD ATCC							
Ålesund/Vigra	ENAL	0400 - 2230					0400 - 2300		
		RMK: Outside opening HR O/R prior to closing							
AD 3.3 Operational hours:		Fuel							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Værøy	ENVR	NIL							

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 417 06 956 / (+47) 417 06 955							
Andøya/Andenes	ENAN	0400 - 1900				0700 - 1330		1130 - 2000	
		RMK: -							
Arendal/Gullknapp	ENGK	NIL							
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu							
		0730-1530		O/R		O/R			
		MIL TFC FLO Forsyning Transport (Air Movement & Transportation)							
Bergen/Flesland	ENBR	AVBL during HO RMK: Aviator (+47) 982 98 400 GA Partner (+47) 938 15 000 / ops@gapa.no Widerøe Ground Handling (+47) 64 82 65 02							
Berlevåg	ENBV	NIL							
Bodø	ENBO	AVBL during HO RMK: Widerøe Ground Handling (+47) 417 06 802 Aviator (+47) 948 26 655							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R							
		RMK: Air Service (+47) 400 03 031							
Båtsfjord	ENBS	0600-2205				NIL		1430 - 2205	
Florø	ENFL	No detailed OPS HR, AVBL O/R							
		RMK: Florø Flyservice (+47) 57 74 67 00							
Førde/Bringeland	ENBL	0430 - 2200				0630 - 1500		1030 - 2200	
		RMK: -							
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe (+47) 67 03 50 89							
Harstad/Narvik/Evenes	ENEV	NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R							
		RMK: -							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R							
		RMK: Aviator (+47) 400 02 444 / operations.hau@aviator.eu / (+47) 982 98 398 (Duty Manager) Widerøe Ground Handling (+47) 417 06 577 / handling.hau@wideroe.no							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R							
		RMK: -							
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL O/R							
Kirkenes/Høybukta	ENKR	AVBL within ATS OPS HR RMK: Widerøe Ground Handling handling.kkn@wideroe.no							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling							
Kristiansund/Kvernberget	ENKB	NIL							
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 364							
Leknes	ENLK	O/R							
		RMK: -							
Mehamn	ENMH	NIL							
Mo i Rana/Røssvoll	ENRA	NIL							
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>	
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no Aviator (+47) 976 65 268 / Operations.MOL@aviator.eu							
Mosjøen/Kjærstad	ENMS	NIL							
		O/R							
Mamsos	ENNM	RMK: -							
Notodden/Tuven	ENNO	NIL							
Ny Ålesund	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24							
		RMK: -							
Rygge	ENRY	AVBL							
		RMK: -							
Røros	ENRO	No detailed OPS HR, AVBL O/R							
		RMK: AD ADMIN Røros Flyservice (+47) 72 41 39 00							
Rørvik/Ryum	ENRM	AVBL by prior arrangement							
		RMK: -							
Røst	ENRS	NIL							
Sandane/Anda	ENSD	0350 - 0900 / 1440 - 2030				0350 - 0900 / 1440 - 2100		0720 - 1050	1400 - 2030
Sandefjord/Torp	ENTO	No detailed OPS HR, AVBL							
		RMK: REF ENTO AD 2.20							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R							
		REF: AD ADMIN							
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 57 62 82 52							
Stavanger/Sola	ENZV	AVBL H24 REF: Widerøe Ground Handling (+47) 64 82 65 02 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu SundtAir (+47) 400 41 010 / svg.handling@sundtair.com							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		REF: -							
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915		CSLD	1100 - 1815
		REF: -							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135	
		RMK: -							
Sprkjosén	ENSR	No detailed OPS HR, AVBL O/R							
		REF: -							
Tromsø/Langnes	ENTC	AVBL for scheduled flights. Otherwise O/R: REF: WGH (+47) 64 82 69 04 / handling.tos@wideroe.no Aviator (+47) 77 28 04 00 / operations.tos@aviator.eu							
Trondheim/Værnes	ENVA	AVBL for scheduled flights. Otherwise O/R							
		RMK: Aviator (+47) 74 60 20 10 WGH (+47) 64 82 67 10							
Vadsø	ENVD	0300 - 1330 / 1430 - 2330				1015 - 1445		0930 - 1300 /	
		RMK: -							
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130				NIL		1700 - 2130	
		RMK: -							
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	0430 - 2230				0500 - 1000 / 1615 - 1700		1100 - 2230	
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no							
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL							
		RMK: Widerøe Ground Handling (+47) 417 06 200 / handling.aes@wideroe.no Aviator (+47) 70 30 25 60 / (+47) 922 00 472 / operations.aes@aviator.eu							

AD 3.3 Operational hours

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	No detailed OPS HR, AVBL O/R						
		RMK: AD ADMIN						

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0445-2300					1130-1430	0745-2330	
		RMK: -							
Andøya/Andenes	ENAN	0400-1900						0700-1330	1130-2000
		RMK:-							
Arendal/Gullknapp	ENGK	NIL							
Bardufoss	ENDU	No detailed OPS HR, AVBL for OPR SCHED TFC							
		RMK: O/R outside HR of OPR SCHED TFC to CIV AD ADMIN							
Bergen/Flesland	ENBR	AVBL H24							
		RMK: Avinor Security (+47) 67 03 15 50							
Berlevåg	ENBV	NIL							
Bodø	ENBO	AVBL H24							
		RMK: Operations Centre (+47) 67 03 37 00							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R							
		RMK: AD ADMIN							
Båtsfjord	ENBS	0600 - 1700 / 1900 - 2200					NIL	1400 - 1700	
		RMK: -							
Florø	ENFL	No detailed OPS HR, AVBL O/R							
		RMK:-							
Førde/Bringeland	ENBL	0430 - 1100 / 1200 - 2000					0630 - 1200	1030 - 1930	
		RMK: -							
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R							
		RMK: Securitas (+47) 67 03 50 88							
Harstad/Narvik/Evenes	ENEV	NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R							
		RMK: -							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R							
		RMK: 3 HR prior notice to AD ADMIN required for NON-SCHED TFC to INTL destination							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R							
		RMK: -							
Hønefoss/Eggemoen	ENEG	No detailed OPS HR, AVBL by prior arrangement							
		RMK: -							
Kirkenes/Høybuktnoen	ENKR	0300 - 1400 / 1700 - 2000					0830 - 1130	0830 - 2200	
		RMK: -							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	0330 - 2100							
		RMK: -							
Kristiansund/Kvernberget	ENKB	NIL							
Lakselv/Banak	ENNA	0500 - 1300 / 1500 - 1800 / 2000 - 2230					0500 - 1410	1045 - 2230	
		RMK: -							
Leknes	ENLK	No detailed OPS HR, AVBL O/R							
		RMK: -							
Mehamn	ENMH	No detailed OPS HR, AVBL O/R							
		RMK: -							
Mo I Rana/Røssvoll	ENRA	0420 - 2210					0530 - 1330	0900 - 2200	
		RMK: -							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Molde/Årø	ENML	0510 - 2230					0530 - 1930	0700 - 2230	
		RMK: -							
Mosjøen/Kjærstad	ENMS	NIL							
Namsos	ENNM	No detailed OPS HR, AVBL O/R							
		RMK: -							
Notodden/Tuven	ENNO	No detailed OPS HR, AVBL O/R							
		RMK: -							
Ny Ålesund/	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24							
		RMK: -							
Rygge	ENRY	NIL							
Rørøs	ENRO	No detailed OPS HR, AVBL O/R							
		RMK: AD ADMIN							
Rørvik/Ryum	ENRM	No detailed OPS HR, AVBL by prior arrangement							
		RMK: -							
Røst	ENRS	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandefjord/Torp	ENTO	NIL							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R							
		RMK: AD ADMIN							
Sogndal/Haukåsen	ENSG	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 934 10 977							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: Avinor Security (+47) 952 59 381							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815	
		0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135				0415-2135	0730-1250	1130 - 1330/ 1530 - 2135	
		RMK: -							
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R						NIL	O/R
		RMK: -							
Tromsø/Langnes	ENTC	0430 - 2300					HO	HO	
		AVBL H24							
Trondheim/Værnes	ENVA	RMK: Avinor Security (+47) 67 03 28 00 / Securitas (+47) 941 65 959							
Vadsø	ENVD	0230 - 2400					1000 - 1500	0930 - 2400	
		RMK: -							
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130					NIL	1700 - 2130	
		RMK: -							
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL O/R							
		RMK: Nokas Aviation Security AS (+47) 971 93 763 / lin.sande@nokas.com							
Ålesund/Vigra	ENAL	0400 - 2230						0400 - 2300	
		RMK: -							

AD 3.3 Operational hours: Security

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Væøy	ENVR	O/R ADMIN						

AD 2.3 Operational hours: De-icing Revised per AIRAC 21.05.2020

# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.

# Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.

# Data with a yellow background is updated since last revision.

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN	
Alta	ENAT	0530-1800 / 2130-2400						1200-1400	0730-2330
		RMK: (+47) 417 06 931 / (+47) 417 06 962							
Andøya/Andenes	ENAN	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Arendal/Gullknapp	ENGG	NIL							
		No detailed OPS HR, AVBL O/R							
Bardufoss	ENDU	RMK: CIV TFC Aviator Airport Alliance AS (+47) 77 28 65 60 / (+47) 908 79 221 / operations.bdu@aviator.eu Limited to ACFT max height 17 M MIL TFC Base/Wing Ops, (+47) 77 89 62 52 Limited to ACFT max height 17 M							
Bergen/Flesland	ENBR	01 OCT - 30 APR AVBL H24 01 MAY - 30 SEP AVBL O/R de-ice operator							
		RMK: Aviator De-icing 0515 - 2315 (+47) 920 41 009 Widerøe Ground Handling 0530-2300 (O/R 2300-0530 (+47) 64 82 85 02							
Berlevåg	ENBV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Bodø	ENBO	HO							
		RMK: Widerøe Ground Handling (+47) 417 06 818							
Brønnøysund/Brønnøy	ENBN	No detailed OPS HR, AVBL O/R							
		RMK: Air Service (+47) 400 03 031 / (+47) 989 01 346							
Båtsfjord	ENBS	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Florø	ENFL	No detailed OPS HR, AVBL O/R							
		RMK: Florø Flyservice (+47) 57 74 67 00							
Førde/Bringeland	ENBL	0430 - 2200					0630 - 1500	1030 - 2200	
		RMK: NIL							
Hammerfest	ENHF	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Harstad/Narvik/Evenes	ENEV	0500 - 2359		0001 - 0120 / 0500 - 2359		0001 - 0220 / 0445 - 1915	0500 - 2310		
		RMK: NIL							
Hasvik	ENHK	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Haugesund/Karmøy	ENHD	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Honningsvåg/Valan	ENHV	No detailed OPS HR, AVBL O/R							
		RMK: NIL							
Hønefoss/Eggemoen	ENEG	NIL							
Kirkenes/Høybuktnmoen	ENKR	Within ATS OPS, AVBL O/R							
		RMK: Widerøe Ground Handling handling.kkn@wideroe.no							
Kjeller	ENKJ	NIL							
Kristiansand/Kjevik	ENCN	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling							
Kristiansund/Kvernberget	ENKB	NIL							
		No detailed OPS HR, AVBL O/R							
Lakselv/Banak	ENNA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 364							
Leknes	ENLK	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 336							
Mehamn	ENMH	NIL							
Mo i Rana/Røssvoll	ENRA	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 989 01 355							
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>	
Molde/Årø	ENML	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 671 / handling.mol@wideroe.no							
Mosjøen/Kjærstad	ENMS	0520 - 2050						0720 - 1550	0920 - 2050
		RMK: -							
Namsos	ENNM	No detailed OPS HR, AVBL for SCHED TFC and AMB							
Notodden/Tuven	ENNO	NIL							
Ny Ålesund/Hammerabben	ENAS	NIL							
Oslo/Gardermoen	ENGM	AVBL H24							
		RMK: REF ENGM AD 2.20 para 11							
Rygge	ENRY	NIL							
Røros	ENRO	No detailed OPS HR, AVBL O/R							
		RMK: AVBL O/R Røros Flyservice (+47) 72 41 39 00							
Rørвик/Ryum	ENRM	No detailed OPS HR, AVBL O/R							
		RMK: AVBL by prior arrangement							
Røst	ENRS	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandane/Anda	ENSD	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sandefjord/Torp	ENTO	AVBL 0500 - 2200							
		RMK: REF ENTO AD 2.20							
Sandnessjøen/Stokka	ENST	No detailed OPS HR, AVBL O/R							
		RMK: -							
Sogndal/Haukøsen	ENSG	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe (+47) 57 62 82 52							
Stavanger/Sola	ENZV	AVBL H24							
		RMK: SGS (+47) 957 19 657 Aviator Stavanger (+47) 454 89 980 / operations.svg@aviator.eu							
Stokmarknes/Skagen	ENSK	No detailed OPS HR, AVBL O/R							
		RMK: (+47) 989 01 457							
<b>AIRPORT</b>	<b>ICAO</b>	<b>MON</b>	<b>TUE</b>	<b>WED</b>	<b>THU</b>	<b>FRI</b>	<b>SAT</b>	<b>SUN</b>	
Stord/Sørstokken	ENSO	0500-1815			0500 - 2115	0500 - 1915	NIL	1100 - 1815	
		RMK: -							
Svalbard/Longyear	ENSB	0000-0100/ 0700-1600/ 2200-0000*	0000-0100* / 0700-1600	0930-1600	0730-1600	0730-1430/ 2200-0000*	0000-0100	1130-1330 / 2200-0000*	
		RMK: See "Fire & Rescue Service" for description of annotation *							
Svea	ENSA	NIL							
Svolvær/Helle	ENSH	0330-2135			0415-2135		0730-1250	1130 - 1330/ 1530 - 2135	
		RMK: -							
Sørkjosen	ENSR	No detailed OPS HR, AVBL O/R					NIL	O/R	
		RMK: -							
Tromsø/Langnes	ENTC	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 64 82 69 04 / handling.tos@wideroe.no AVBL for scheduled flights. Otherwise O/R.							
Trondheim/Værnes	ENVA	RMK: WGH De-icing (+47) 417 06 713 (day) / (+47) 417 06 719 (night) Aviator De-icing (+47) 910 02 980							
Vadsø	ENVD	0300 - 1330 / 1430 - 2330					1015 - 1445	0930 - 1300 / 1400 - 2400	
		RMK: -							
Vardø/Svartnes	ENSS	0730 - 1230 / 1700 - 2130					NIL	1700 - 2130	
		RMK: -							
Ørland	ENOL	NIL							
Ørsta-Volda/Hovden	ENOV	No detailed OPS HR, AVBL H24 O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 350 / orsta-volda@wideroe.no							
Ålesund/Vigra	ENAL	No detailed OPS HR, AVBL O/R							
		RMK: Widerøe Ground Handling (+47) 417 06 200							

AD 3.3 Operational hours: De-icing

AIRPORT	ICAO	MON	TUE	WED	THU	FRI	SAT	SUN
Værøy	ENVR	NIL						



# All times in AIP Norway are given in Norwegian standardtime (wintertime) UTC+1. In order to obtain UTC when daylight saving time is in force, 1 hour must be added to all times given in the AIP Norway. For more information see AIP Norway GEN 2.1.2.  
 # Consult AIP Norway, AD 1.1 for details concerning extension of service availability and extra ordinary openings, including description of any surcharges.  
 # Data with a yellow background is updated since last revision.

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Alta	ENAT	CAT 4	Outside published HR CAT 7							
		CAT 6	0600 - 2200						0600-1200	0900-2200
Andøya/Andenes	ENAN	CAT 7	H24							
		CAT 7	O/R ATC MNM 12 HR prior to ETA							
Arendal/Gullknapp	ENGK		NIL							
Bardufoss	ENDU	CAT 7	H24							
		CAT 8/9	O/R ATC MNM 24 HR prior to ETA							
Bergen/Flesland	ENBR	CAT 7	H24							
		CAT 9	O/R ATC MNM 30 MIN prior to ETA							
Berlevåg	ENBV	CAT 4	0630 - 2200						0600 - 1330	1030 - 1330
Bodø	ENBO	CAT 7	H24							
		CAT 9	AVBL O/R 24 HR prior ETA							
Brønnøysund/Brønnøy	ENBN	CAT 4	0530-1940						0930-1540	1130-1940
		CAT 5	For SKED DH8C TFC only							
Båtsfjord	ENBS	CAT 4	0600-2205						NIL	1430-2205
Florø	ENFL	CAT 4	0410 - 2130						0850 - 0915 / 1530 - 1600	0710 - 0730 / 1530 - 2130
Førde/Bringeland	ENBL	CAT 4	0500-2230						0645-1530	1100-2200
Hammerfest	ENHF	CAT 4	H24							
Harstad/Narvik/Evenes	ENEV	CAT 7	0500 - 2200						0530 - 1300	0900 - 2230
		CAT 9	O/R ATC							
Hasvik	ENHK	CAT 4	0630-2115						NIL	1330-1530 / 1930-2115
Haugesund/Karmøy	ENHD	CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0545-2300						0545-2300	0700-2330
Honningsvåg/Valan	ENHV	CAT 4	0435-2215						NIL	1700-2215
Hønefoss/Eggemoen	ENEG	CAT 4	O/R							
Kirkenes/Høybuktnmoen	ENKR	CAT 4	Outside published CAT 7 HR of OPR							
		CAT 7	0600-2200						0800-1500	0800-2200
Kjeller	ENKJ	CAT 6	O/R for MIL operations							
Kristiansand/Kjevik	ENCN	CAT 4	Outside published CAT 7 HR of OPR							
			0500-2205						0500-2245	
		CAT 7	Outside published CAT 7 HR of OPR, O/R ATC MNM 1 HR prior to ETA							
		CAT 8	O/R ATC MNM 1 HR prior to ETA							
Kristiansund/Kvernberget	ENKB	CAT 4	0515 - 0630						NIL	NIL
			0630 - 2145						0800 - 1300	1030 - 2000
Lakselv/Banak	ENNA	CAT 4	Outside published CAT 7 HR of OPR							
			0500 - 2230		0500 - 2300		1000 - 1645		1030 - 2300	
		CAT 7	Outside published CAT 7 HR of OPR, O/R ATC prior to ETA							
		CAT 9	O/R ATC MNM 48 HR prior to ETA							
Leknes	ENLK	CAT 4	0415 - 2140						0935 - 1240	0935 - 1230 / 1440 - 2140
Mehamn	ENMH	CAT 4	0320-2315						CLSD	1550-2310
Mo i Rana/Røssvoll	ENRA	CAT 4	0455 - 1215 / 1330 - 2210						0535 - 1330	0945 - 1040 / 1315 - 2150
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Molde/Årø	ENML	CAT 7	0510 - 2230						0530 - 1930	0700 - 2230
Mosjøen/Kjærstad	ENMS	CAT 4	0520 - 2150						0820 - 1150	1120 - 2150
Namsos	ENNM	CAT 4	0500 - 2100						0500 - 1100	1500 - 2100
Notodden/Tuven	ENNO	CAT 3	O/R							
Ny Ålesund/Hammerabben	ENAS	CAT 3	Within AFIS HR of SER							
Oslo/Gardermoen	ENGM	CAT 9	H24							
Rygge	ENRY	CAT 3	O/R							
Røros	ENRO	CAT 4	For SCHED TFC and charter TFC. Other TFC on 10 MIN prior request							
			CAT 5						AVBL O/R ATS MNM 48 HR prior to ETA	
			CAT 6							
Rørвик/Ryum	ENRM	CAT 4	0515 - 1100 / 1400 - 2130						0700 - 1035	1320 - 2110
Røst	ENRS	CAT4	0615 - 0815 / 1710 - 1910	0615 - 1910			0615 - 0815 / 1710 - 1910	0615 - 0815	1115 - 1315	
Sandane/Anda	ENSD	CAT 4	0350 - 0900 / 1400 - 2030				0350 - 0900 / 1400 - 2100		0720 - 1050	1400 - 2030
Sandefjord/Torp	ENTO	CAT 7	0500 - 2200							
Sandnessjøen/Stokka	ENST	CAT 4	0430 - 2130						0530 - 1245	1200 - 2200
Sogndal/Haukåsen	ENSG	CAT 4	0500 - 2015						0805 - 1145	1030 - 2020
Stavanger/Sola	ENZV	CAT 7	H24							
			O/R ATC MNM 30 MIN prior to ETA							
Stokmarknes/Skagen	ENSK	CAT 4	0410-1915		0410-2150	0720-2150		1000-1300	1150-2150	
Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Stord/Sørstokken	ENSO	CAT 4	For SCHED TFC							
			CAT 5						AVBL O/R ADMIN MNM 48 HR prior to ETA	
			CAT 6							
Svalbard/Longyear	ENSB	CAT 4	0700-0930/ 1330-1600/ 2200-0000	0700-1100/ 1330-1600	1330-1600	0730-1000/ 1330-1600	0730-0930/ 1330-1430	-	-	
			0000-0100*/ 0930-1330/ 2200-0000*	0000-0100*/ 1100-1330	0930-1330	1000-1330	0930-1330/ 2200-0000*	0000-0100*	1130-1330/ 2200-0000*	
			* Only SEP 2nd, 3rd, 7th, 9th, 14th. and 21st							
Svea	ENSA	CAT 3	AVBL O/R							
Svolvær/Helle	ENSH	CAT 4	0330-2135			0415-2135		0730-1250	1130 - 1330 / 1530 - 2135	
Sørkjosen	ENSR	CAT 4	0445-1945						NIL	1115-1315 /
Tromsø/Langnes	ENTC	CAT 4	2300 - 0500							
			0500 - 2300 (AVBL O/R within CAT 4 HRS of OPR)							
			AVBL O/R H24							
Trondheim/Værnes	ENVA	CAT 7	H24							
			O/R ATC MNM 30 MIN prior to ETA							
Vadsø	ENVD	CAT 4	0330 - 2400						1020 - 1500	0920 - 1310 / 1510 - 2045 / 2225 - 2400
Vardø/Svartnes	ENSS	CAT 4	0730 - 2130						NIL	1630 - 2130
Ørland	ENOL	CAT 6	H24							
			AVBL O/R. Please inform if required, when applying for PPR, REF AD 2.20							
Ørsta-Volda/Hovden	ENOV	CAT 4	0505 - 2240						0545 - 0950 / 1640 - 1710	1145 - 2240
			RMK: HOSP/SAR OUTSIDE HR OF OPS AVBL O/R VIA ENBD ATCC							
Ålesund/Vigra	ENAL	CAT 4	AVBL O/R outside CAT 7 HRS of OPR							
			0500 - 2230							

AD 3.6 Rescue and fire fighting services

Airport	ICAO	Category	Mon	Tue	Wed	THU	Fri	Sat	Sun	
Værøy	ENVR	H2	0645 - 1045 / 1345 - 1645						0645 - 1045	1345 - 1645